

NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)



















PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 60 minutes.
- \* Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List










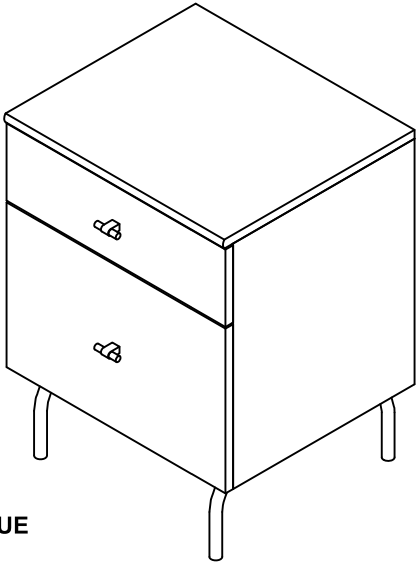


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT ASSEMBLY		1X
C	RIGHT ASSEMBLY		1X
D	FRONT FRAME		1X
E	LOWER FRONT FRAME		1X
F	LOWER BACK FRAME		1X
G	BACK PANEL		1X
H	SMALL DRAWER FRONT		1X
I	SMALL DRAWER LEFT		1X
J	SMALL DRAWER RIGHT		1X
K	SMALL DRAWER BACK		1X
L	DRAWER BASE		2X
M	LARGE DRAWER FRONT		1X
N	LARGE DRAWER LEFT		1X
O	LARGE DRAWER RIGHT		1X
P	LARGE DRAWER BACK		1X
Q	LEG FRAME		2X
R	LEG STRETCHER		2X



Model# NST5002  
Product Dimenions: 18"W x 15 3/4"D x 24"H






WEIGHT CAPACITY:  
TOP: 50 LBS  
DRAWER: 15 LBS  
  
**WARNING: DO NOT OVER TORQUE  
BOLTS/SCREWS**

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	40 MM BOLT	M6x40mm 	4X
HW2	1 1/4" ROUND HEAD SCREW	M4x32mm 	6X
HW3	1 1/4" FLAT HEAD SCREW	M3x32mm 	20X
HW4	3/4" FLAT HEAD SCREW	M3x19mm 	8X
HW5	1/2" FLAT HEAD SCREW	M3x13mm 	4X
HW6	CAMBOLT	Ø8x32mm 	18X
HW7	CAMLOCK	Ø15x10mm 	18X
HW8	HANDLE	60x30x15mm 	2X
HW9	MACHINE SCREW	M4x22mm 	2X
HW10	WEDGE	14x14x10mm 	4X
HW11	WOODEN DOWEL	Ø8x28mm 	8X
HW12	ALLEN KEY		1X


**PREPARATION**

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 60 minutes.
- \* Tools Required for Assembly (included): Allen Key
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

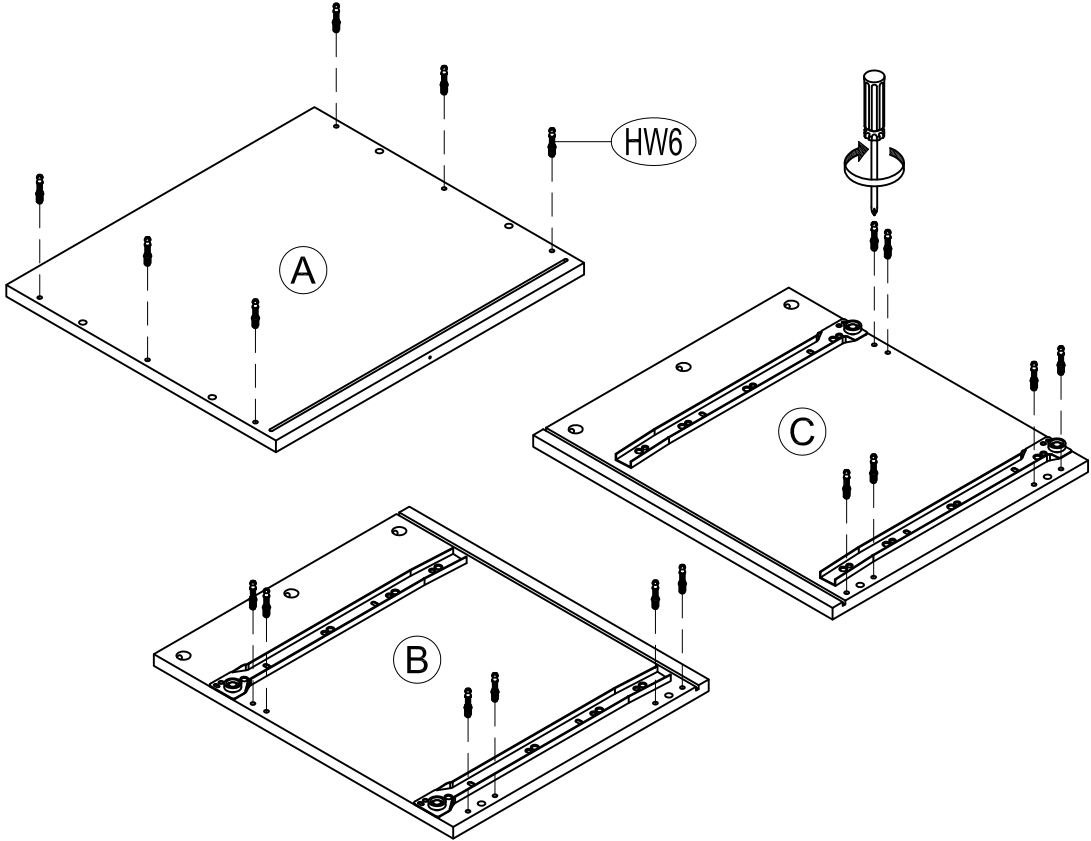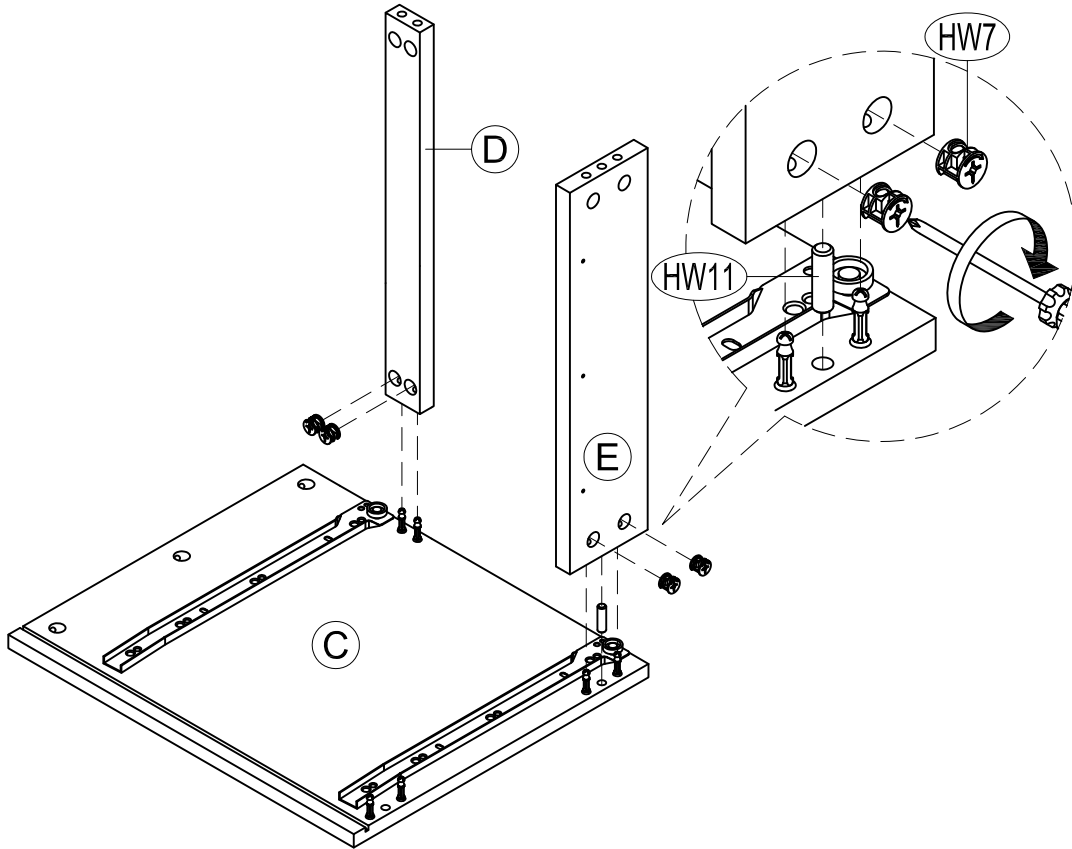
	
<p><b>STEP 1</b> ATTACH CAMBOLT (HW6) TO TOP PANEL (A), LEFT AND RIGHT ASSEMBLIES (B AND C).</p>	<p><b>STEP 2</b> ATTACH FRONT FRAME (D) AND LOWER FRONT FRAME (E) TO RIGHT ASSEMBLY (C) USING CAMLOCK (HW7) AND WOODEN DOWEL (HW11).</p>

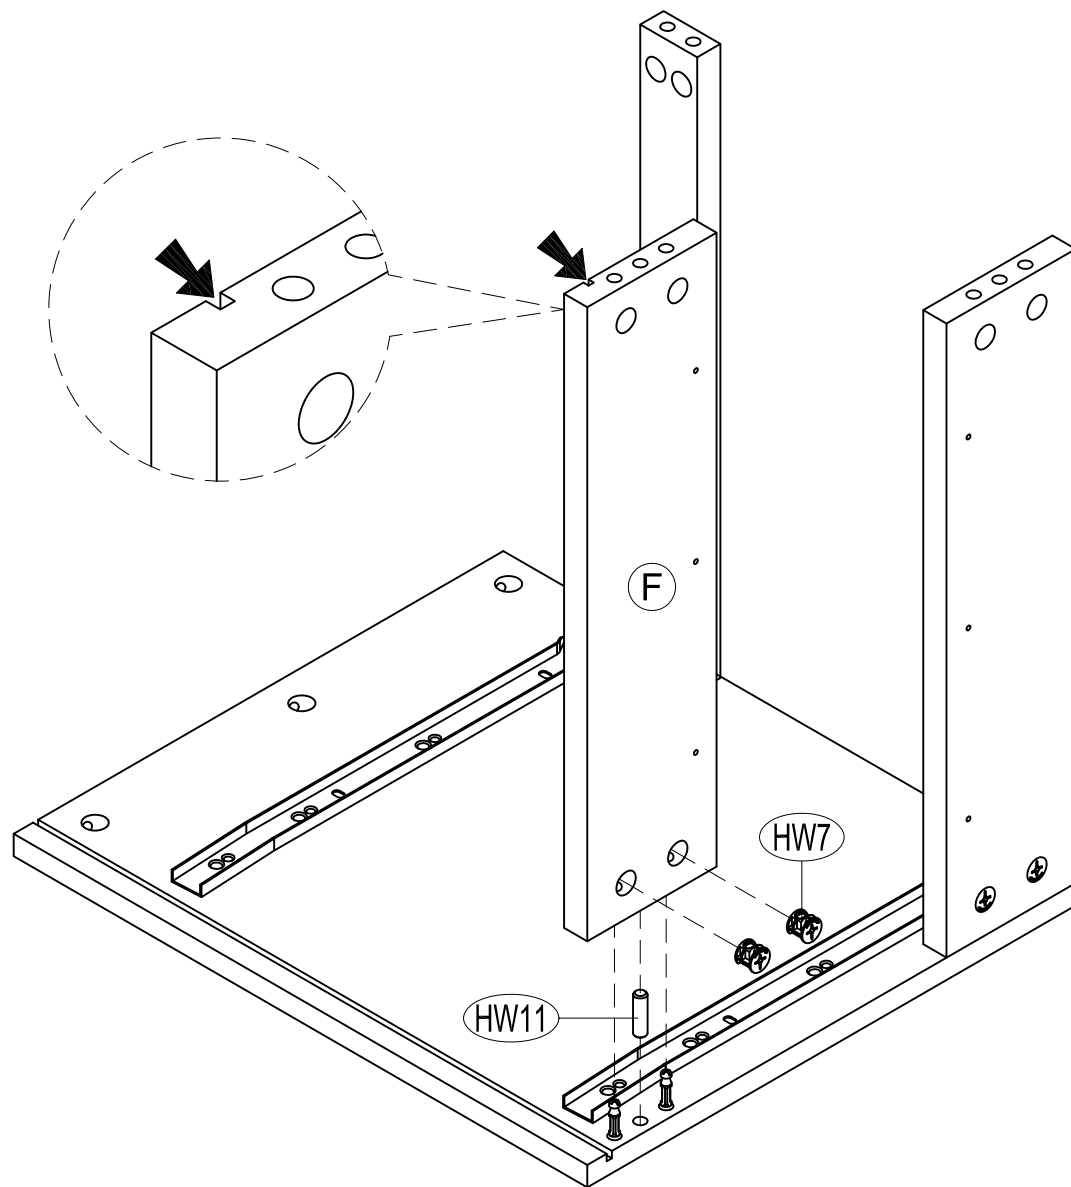


**STEP 3** ATTACH LOWER BACK FRAME (F) TO UNIT USING CAMLOCK (HW7) AND WOODEN DOWEL (HW11).

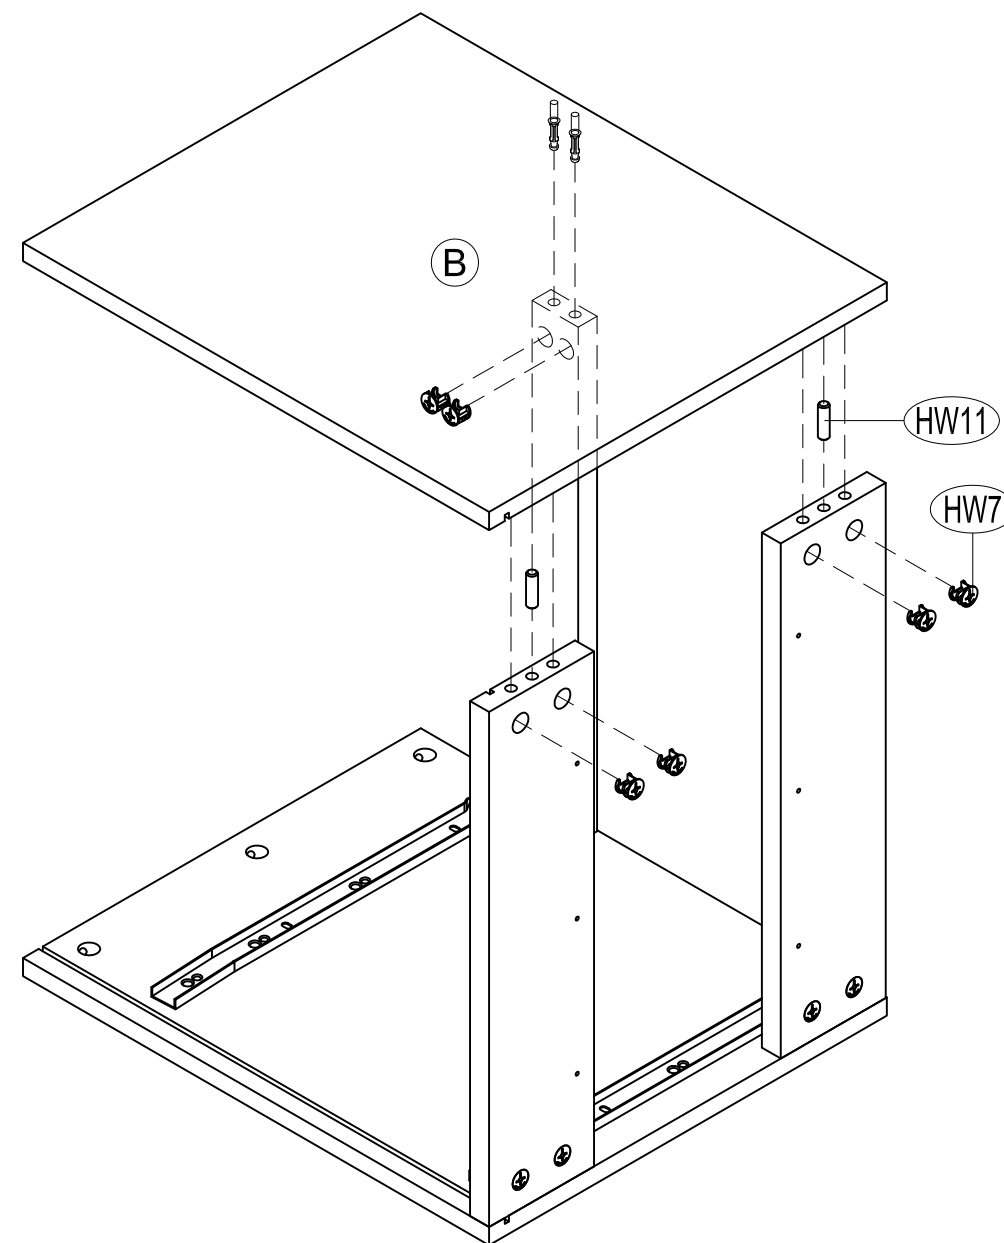


**STEP 4** ATTACH LEFT ASSEMBLY (B) TO UNIT USING CAMLOCK (HW7) AND WOODEN DOWEL (HW11).

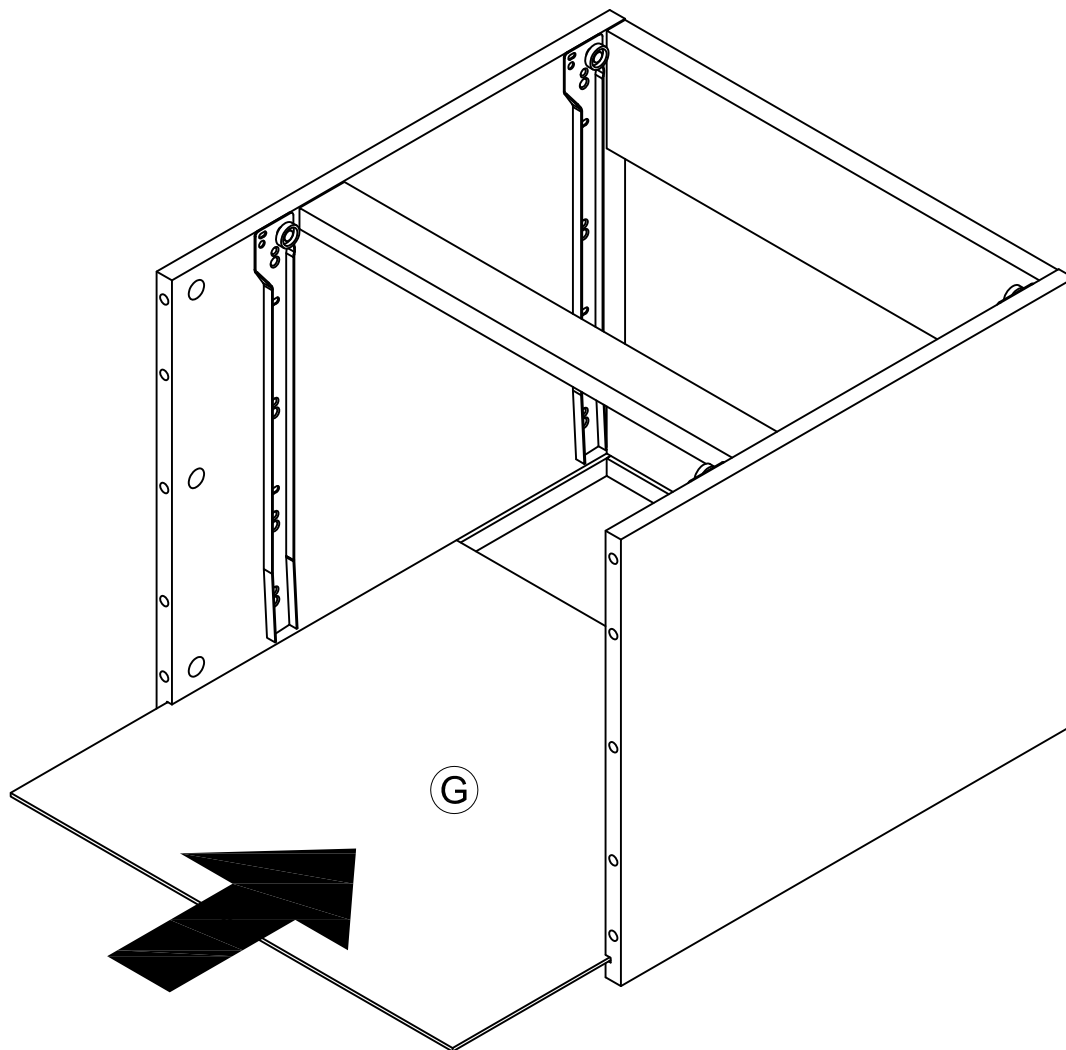


**STEP 5** SLIDE BACK PANEL (G) INTO THE GROOVE.

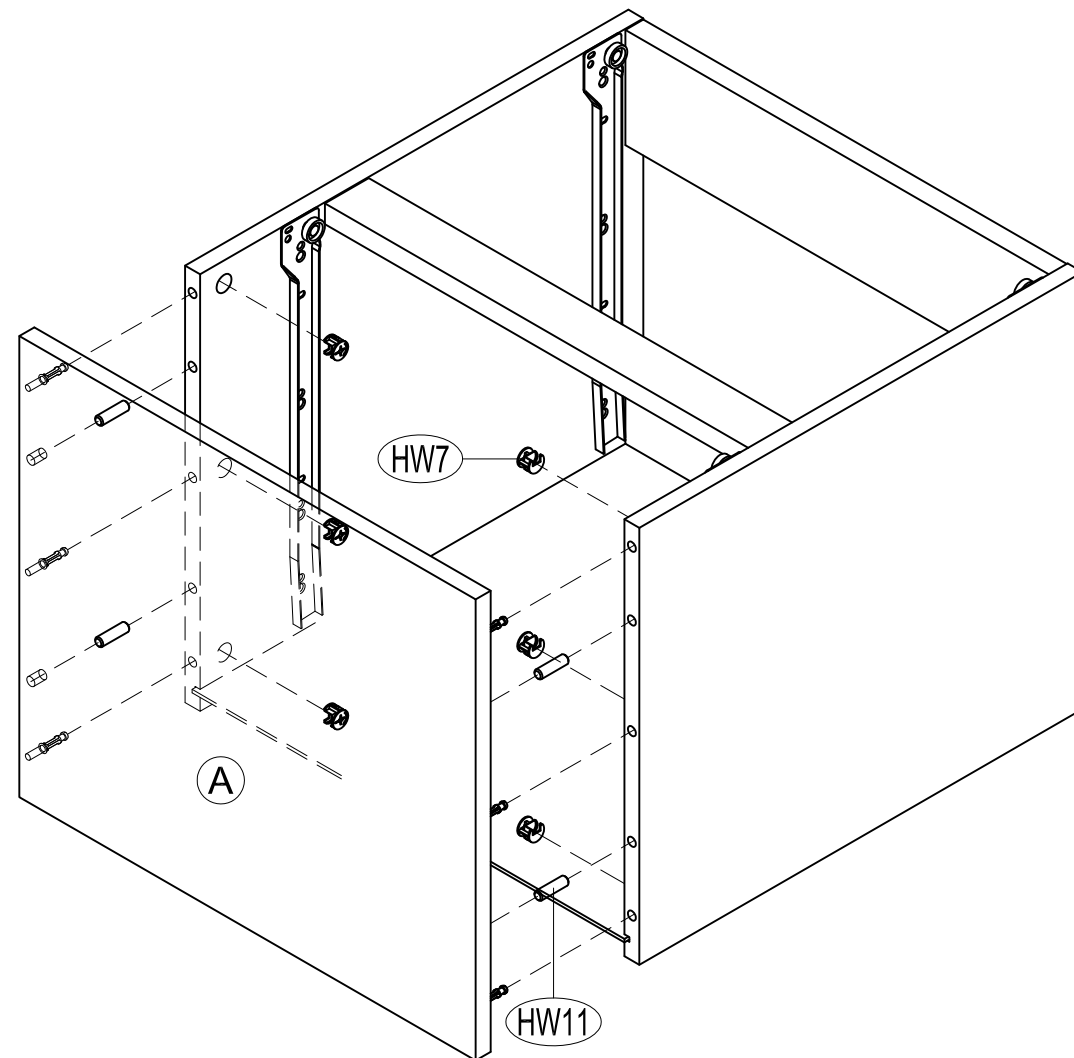


**STEP 6** ATTACH TOP PANEL (A) TO UNIT USING CAMLOCK (HW7) AND WOODEN DOWEL (HW11).

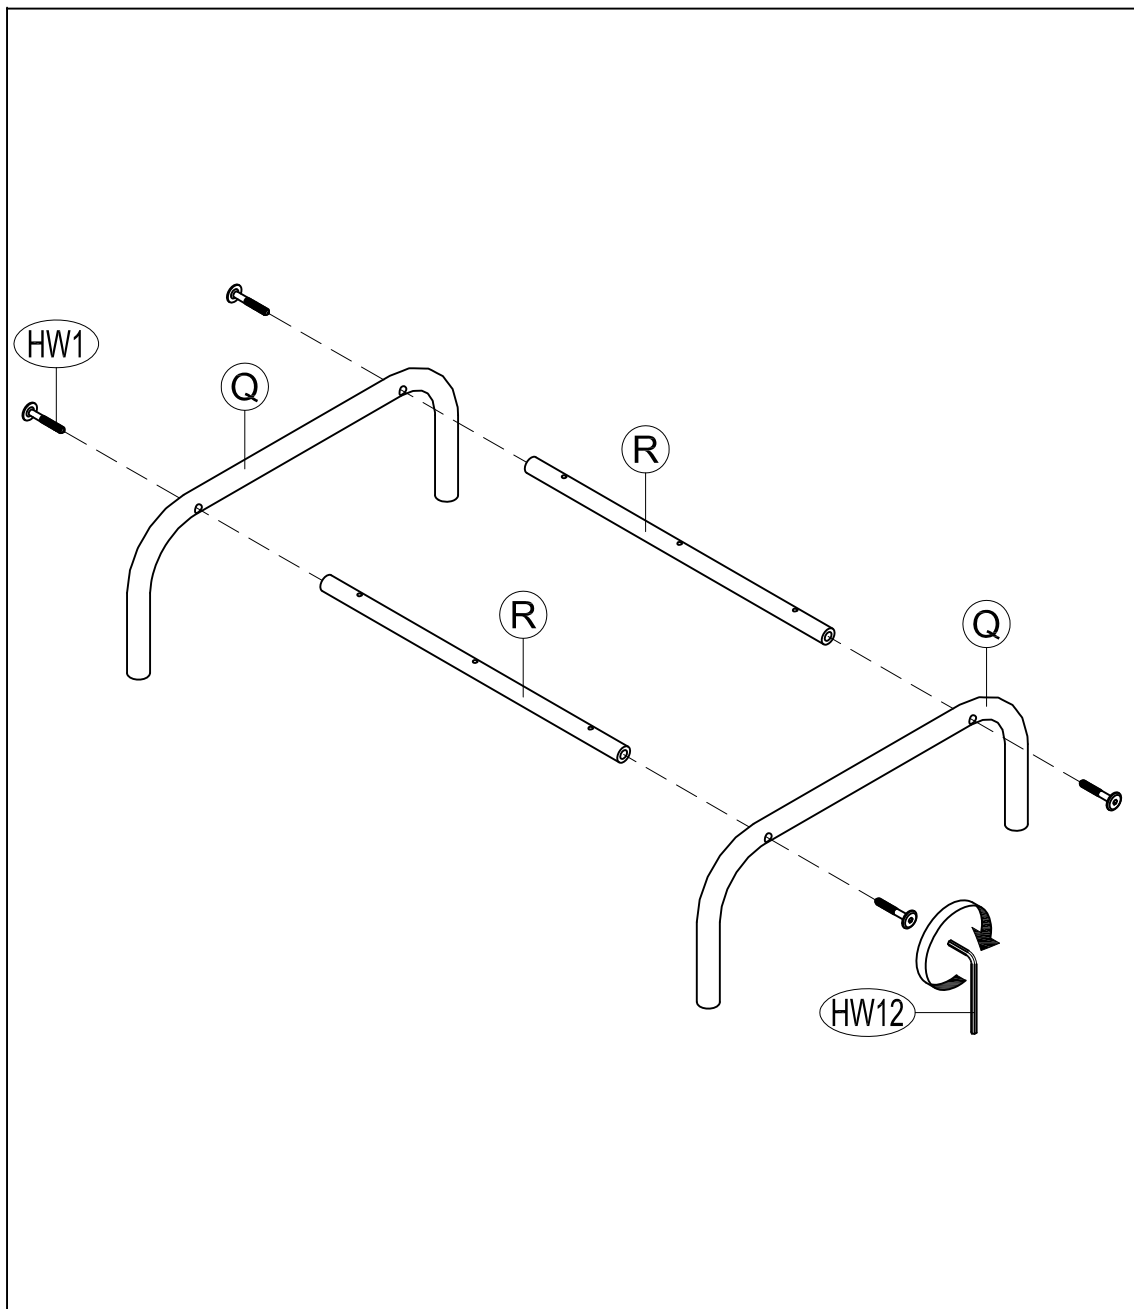


**STEP 7** ATTACH LEG STRETCHER (R) TO LEG FRAME (Q) USING 40 MM BOLT (HW1). TIGHTEN IT USING ALLEN KEY (HW12).

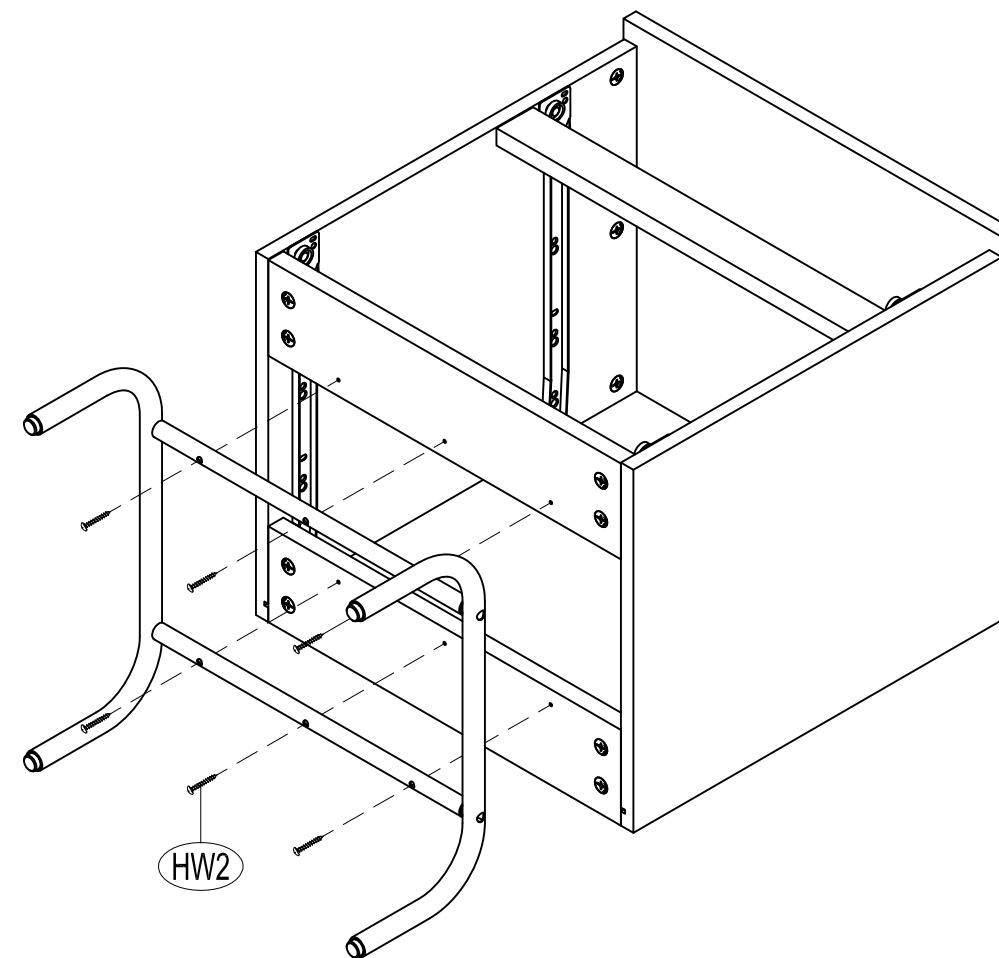


**STEP 8** ATTACH UNIT FROM STEP 6 TO UNIT FROM STEP 5 USING 1 1/4" ROUND HEAD SCREW (HW2).

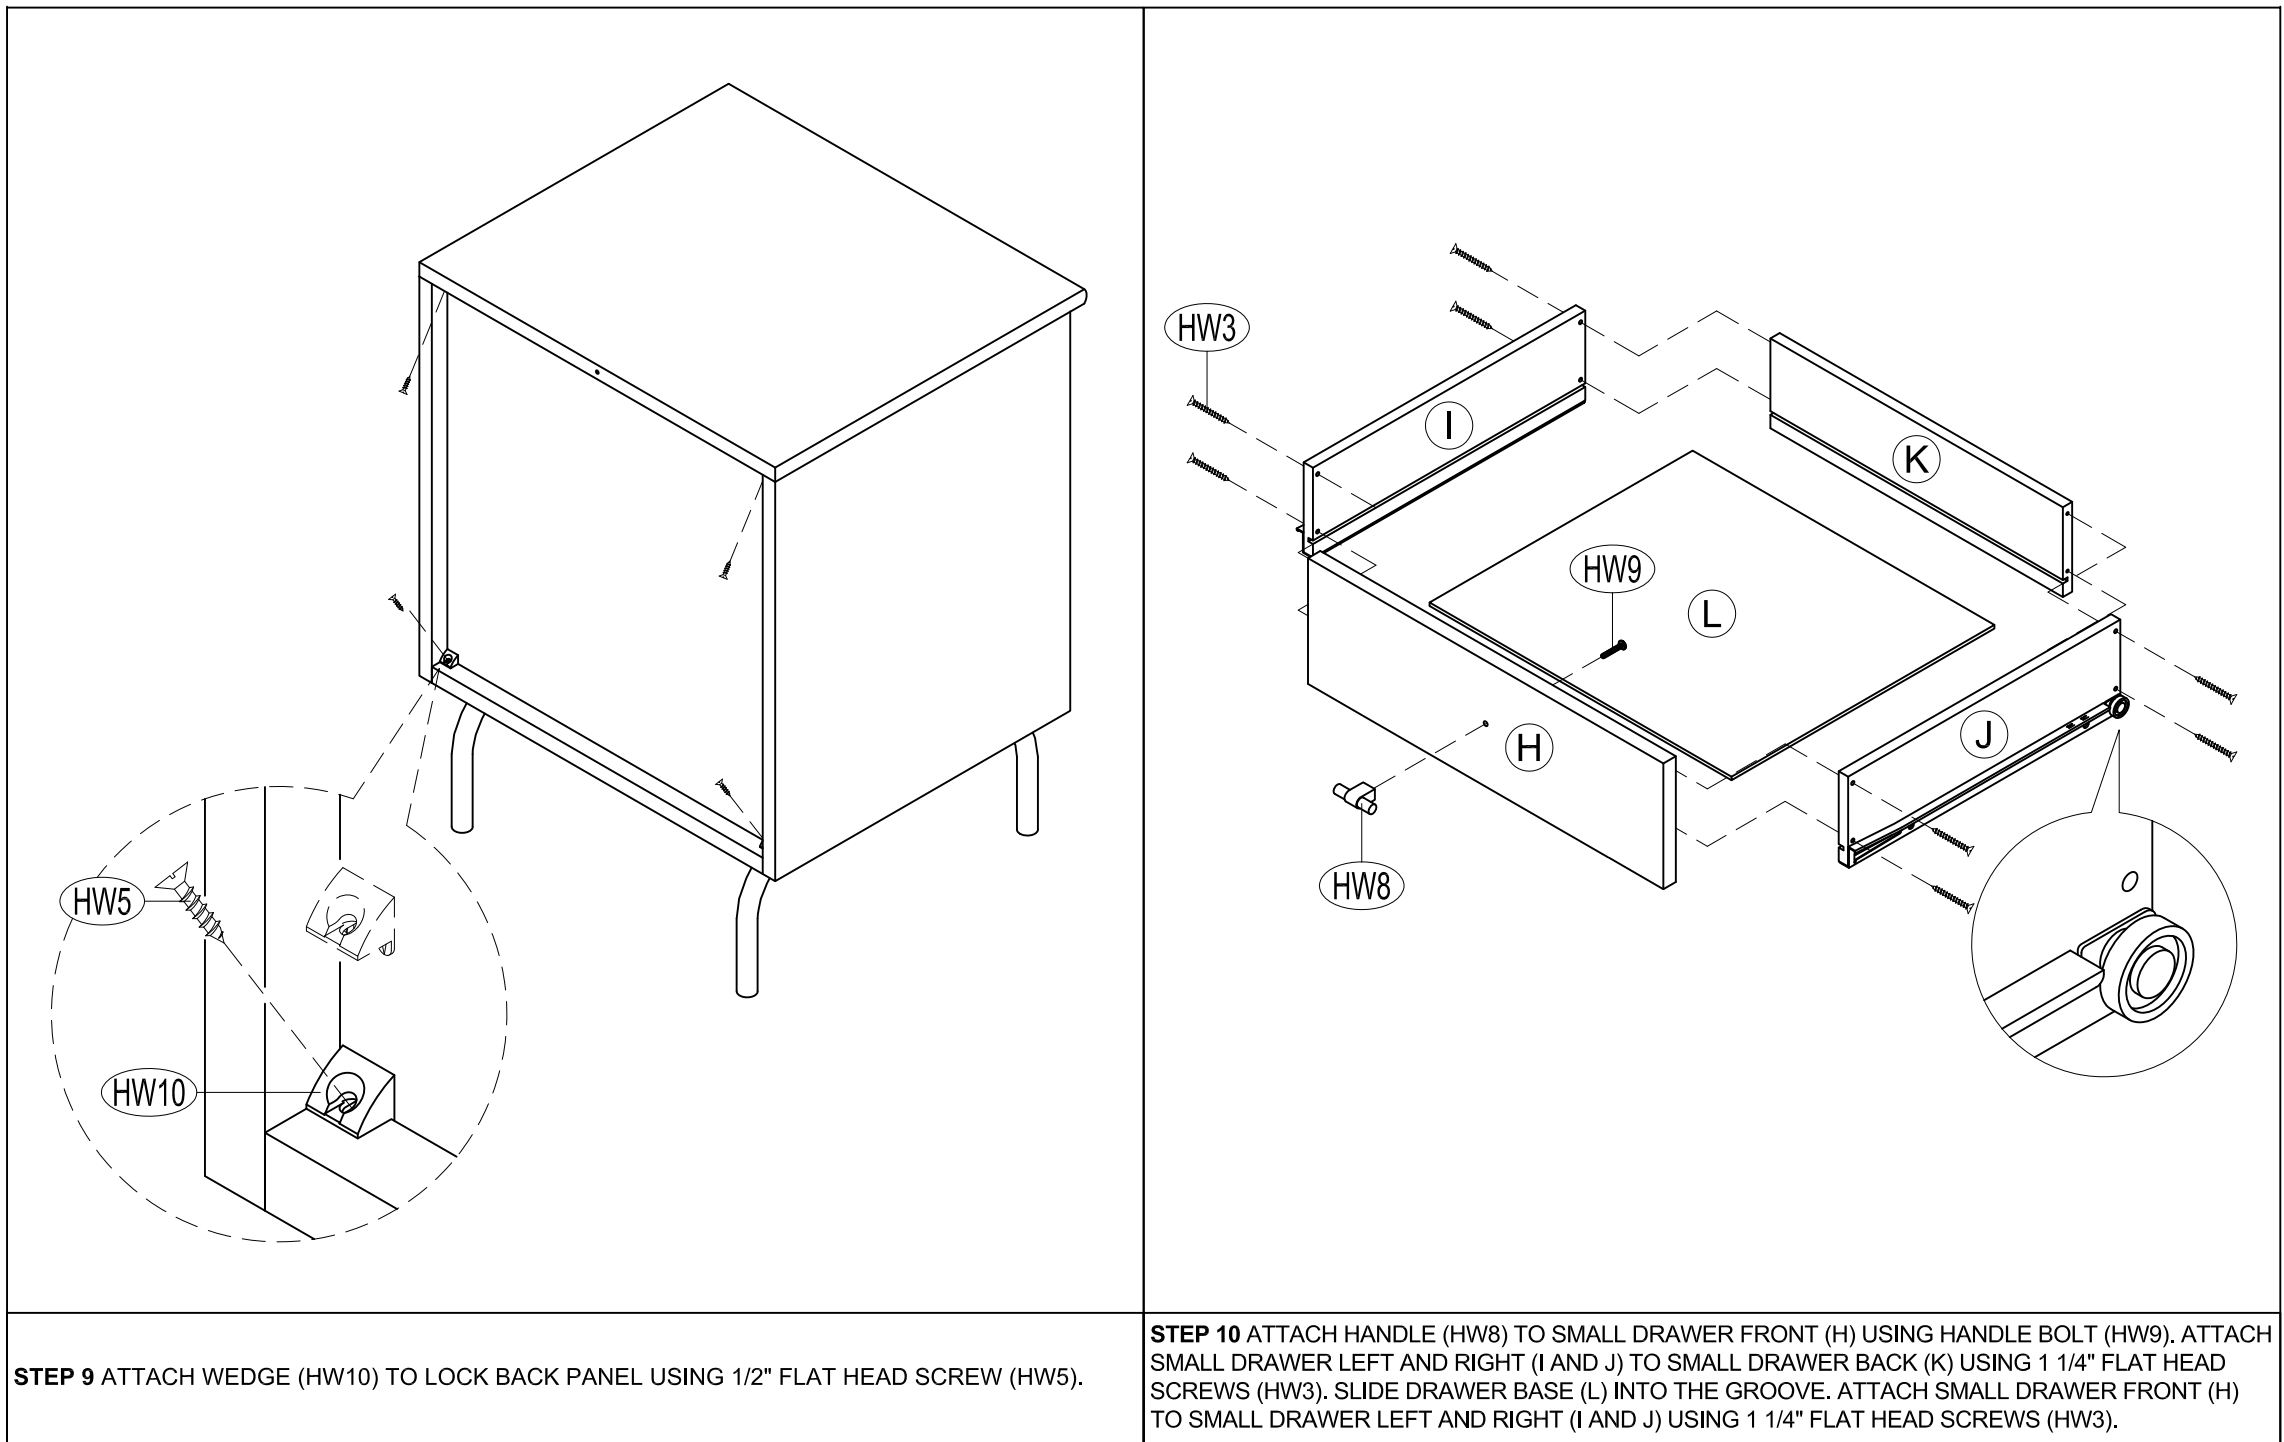


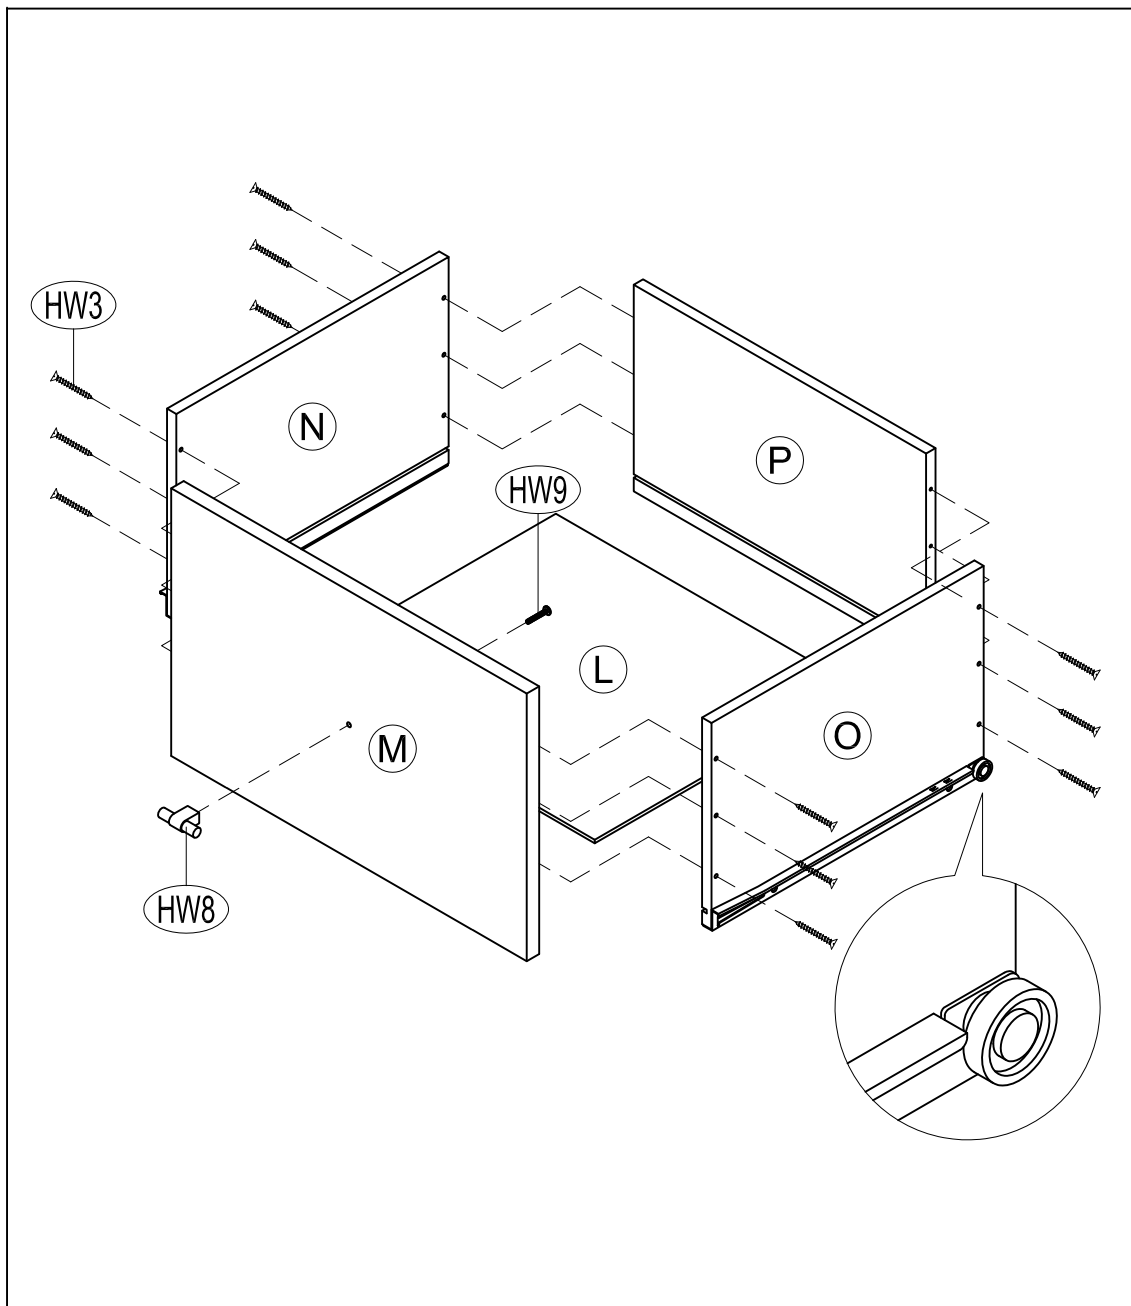


**STEP 11** ATTACH HANDLE (HW8) TO LARGE DRAWER FRONT (M) USING HANDLE BOLT (HW9). ATTACH LARGE DRAWER LEFT AND RIGHT (N AND O) TO LARGE DRAWER BACK (P) USING 1 1/4" FLAT HEAD SCREWS (HW3). SLIDE DRAWER BASE (L) INTO THE GROOVE. ATTACH LARGE DRAWER FRONT (M) TO LARGE DRAWER LEFT AND RIGHT (N AND O) USING 1 1/4" FLAT HEAD SCREWS (HW3).

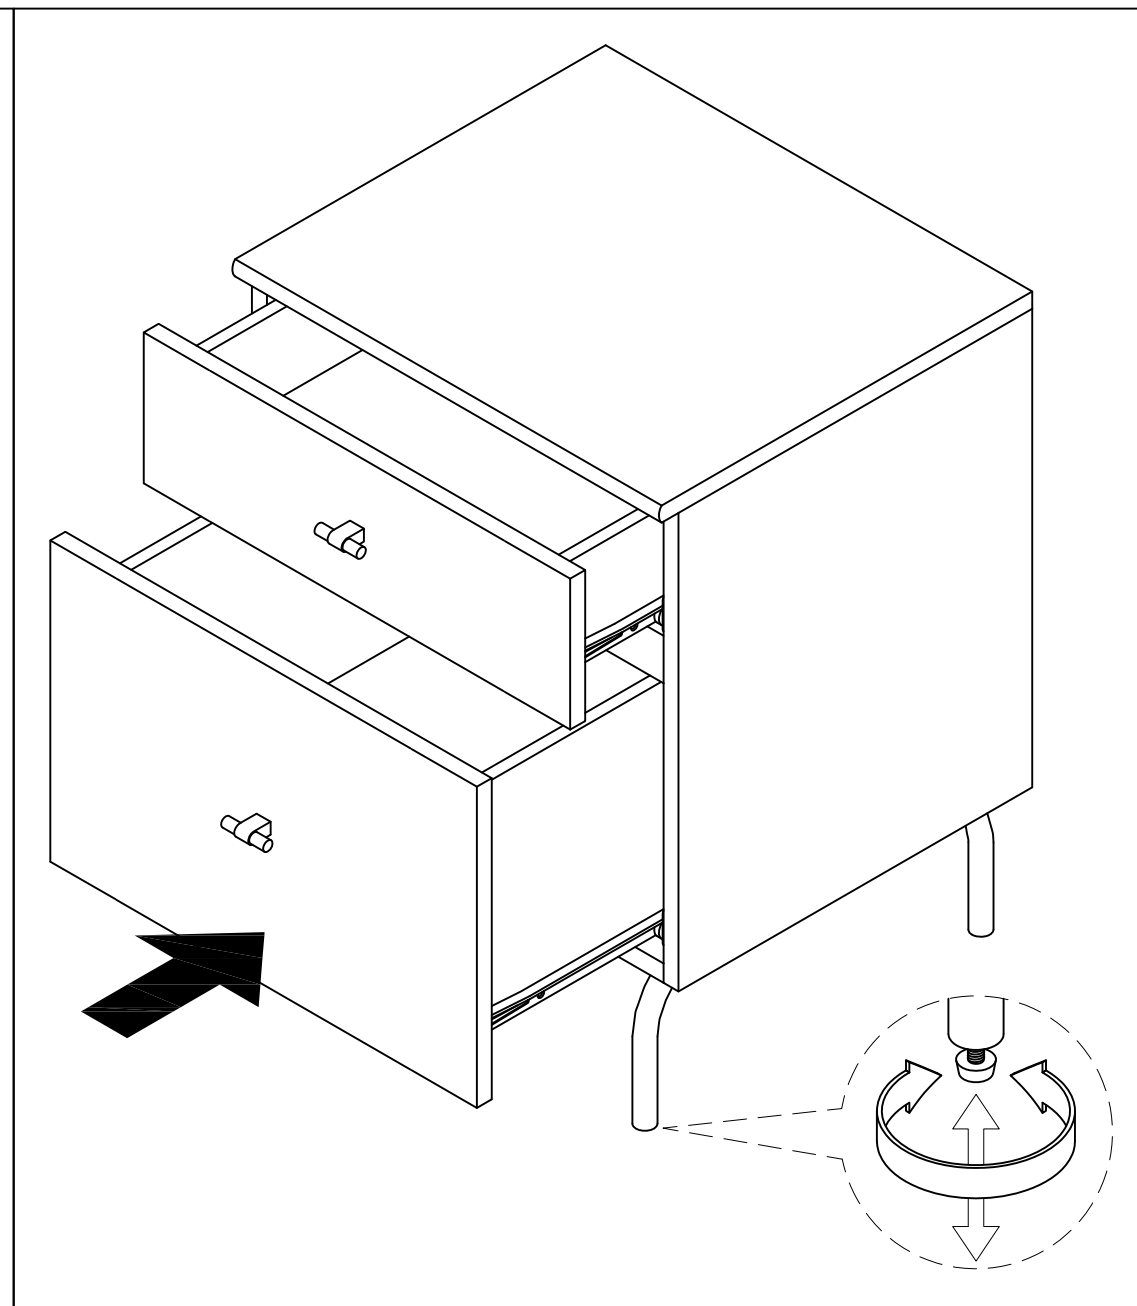

**STEP 12** SLIDE THE DRAWERS INTO UNIT. ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.

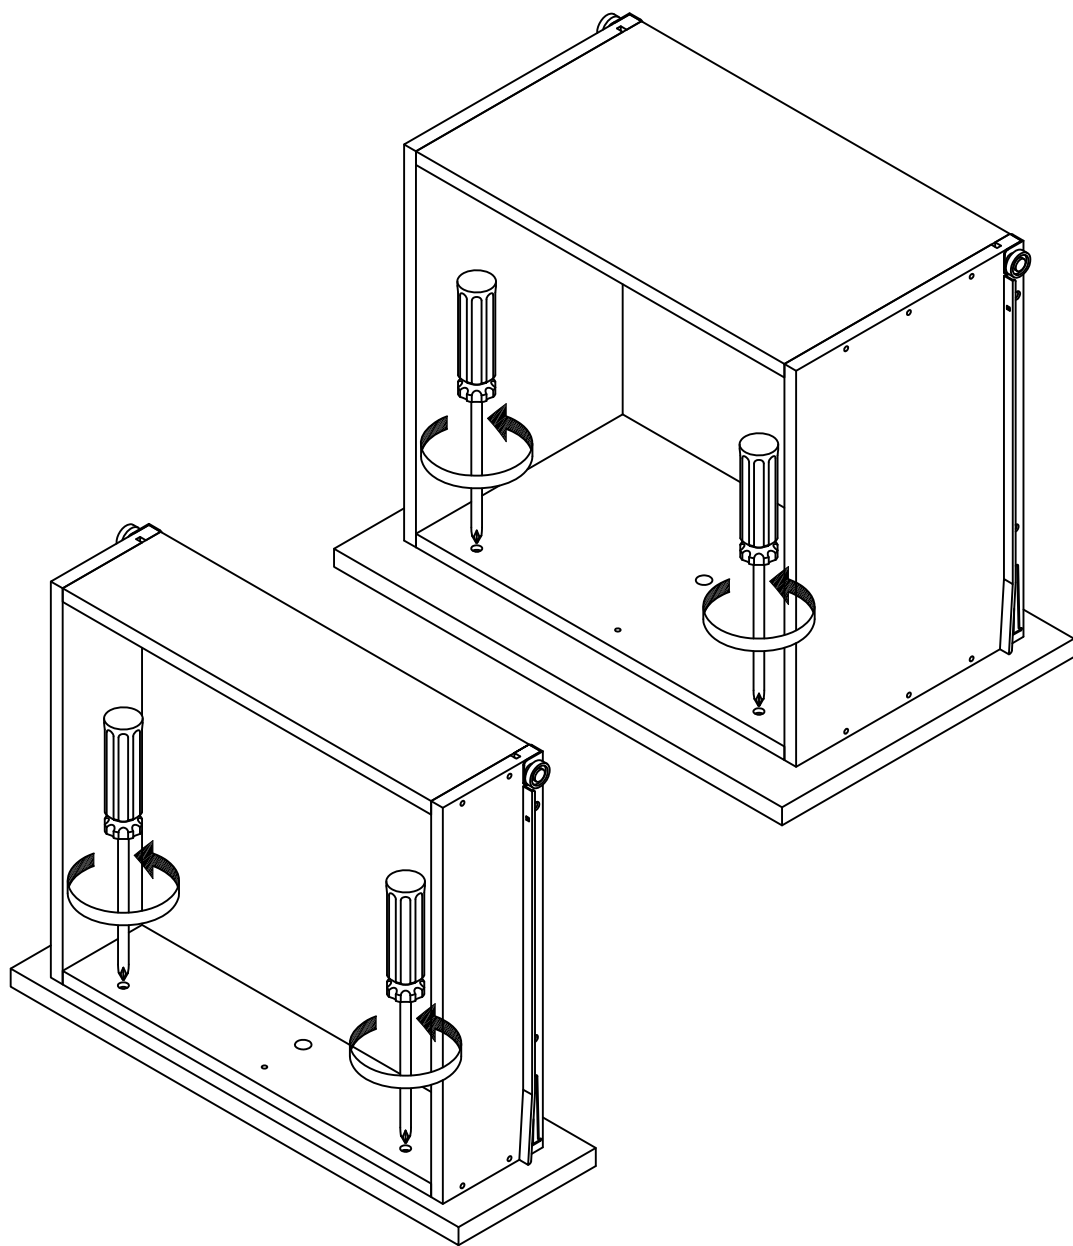


**STEP 13** REMOVE DRAWERS FROM UNIT. LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.

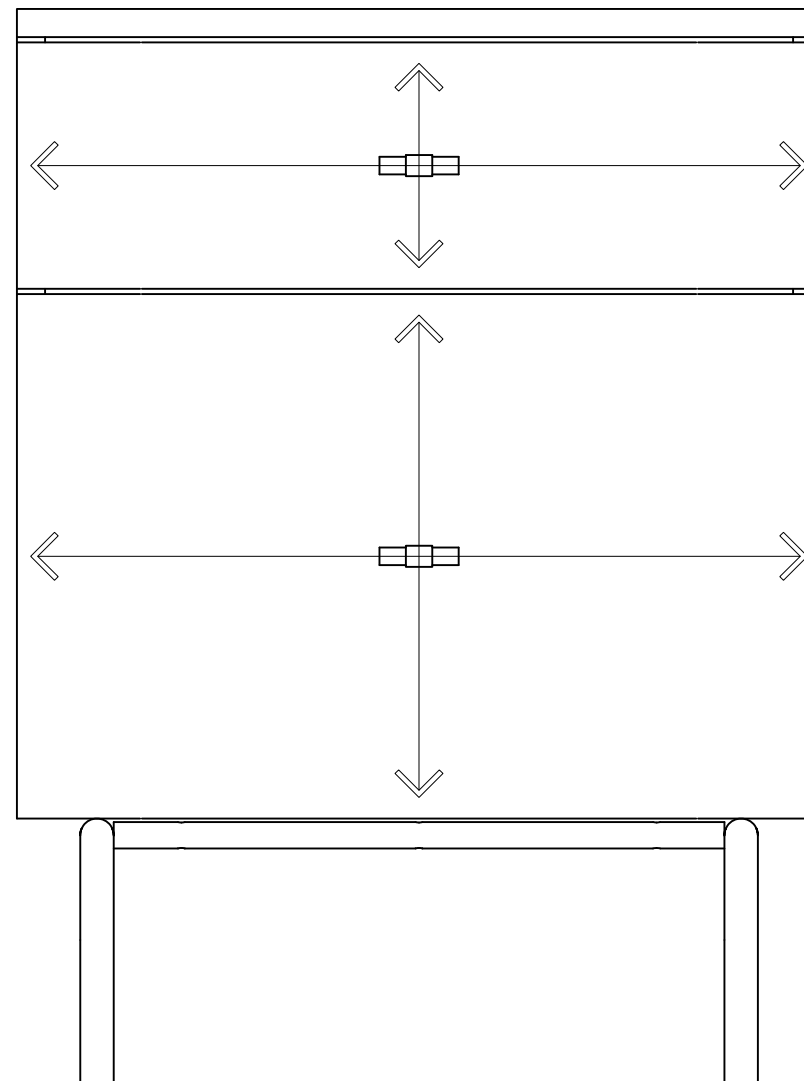


**STEP 14** INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.




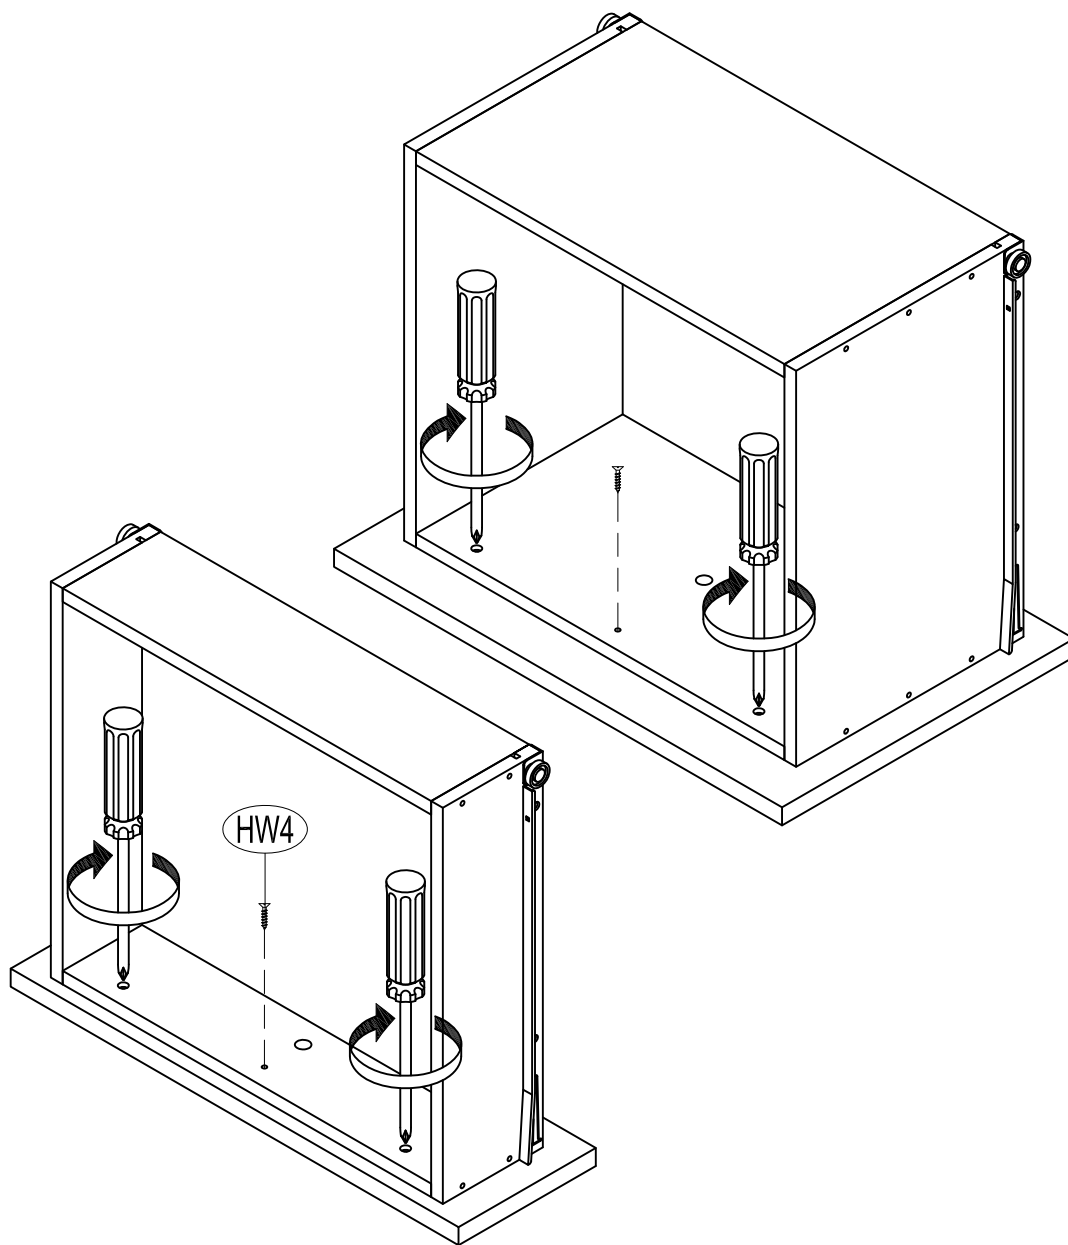

**STEP 15** PULL THE DRAWER OPEN SLOWLY, MAKE SURE THE FRONT PANEL DOES NOT MOVE; RE-TIGHTEN THE SCREWS FROM STEP 12 AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS (HW4).

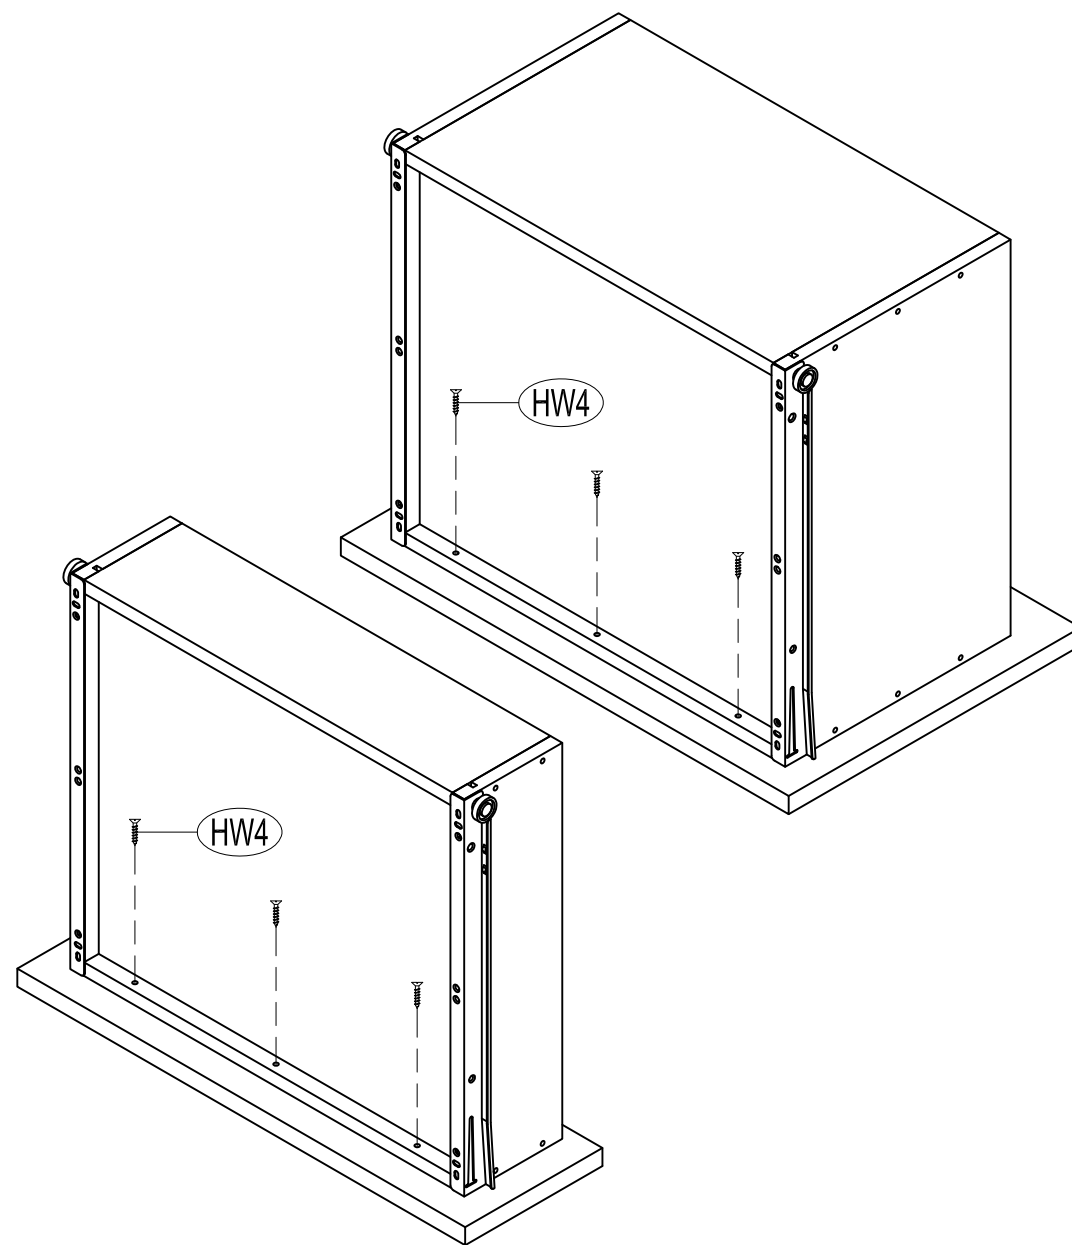

**STEP 16** LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS (HW4).

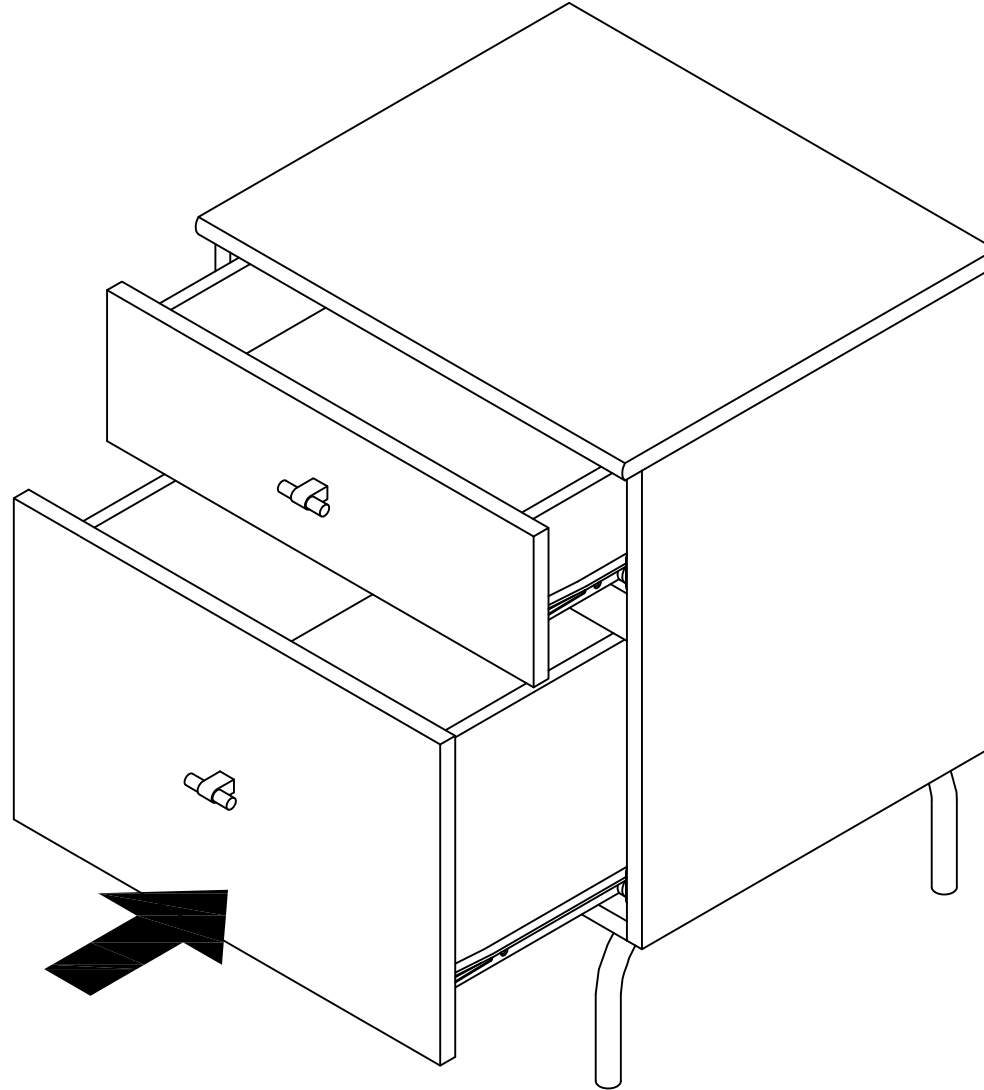

**STEP 17** SLIDE THE DRAWERS INTO UNIT.