







CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Cushion		1x
B	Open Side Frame		2x
C	Closed Side Frame		2x
HW1	Hex Socket Bolt	 1/4"-20x5/8"	16x
HW2	Wood Screw	 Ø4x15mm	4x
HW3	Allen Key	 M4	1x

 **SAFAVIEH**
FURNITURE

Model# OTT6205

Product Dimensions: 16-1/2"Wx16-1/2"Dx19"H

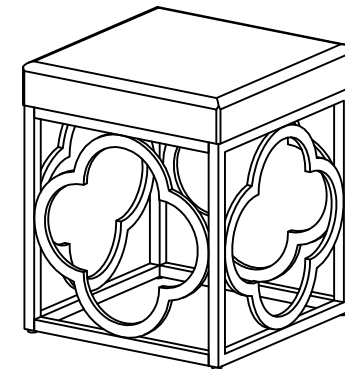


Weight capacity : 275 lbs
WARNING:DO NOT STAND ON THE PRODUCT

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes.

Tools Required for Assembly : Allen Key (included) and Philips head screwdriver (not included)

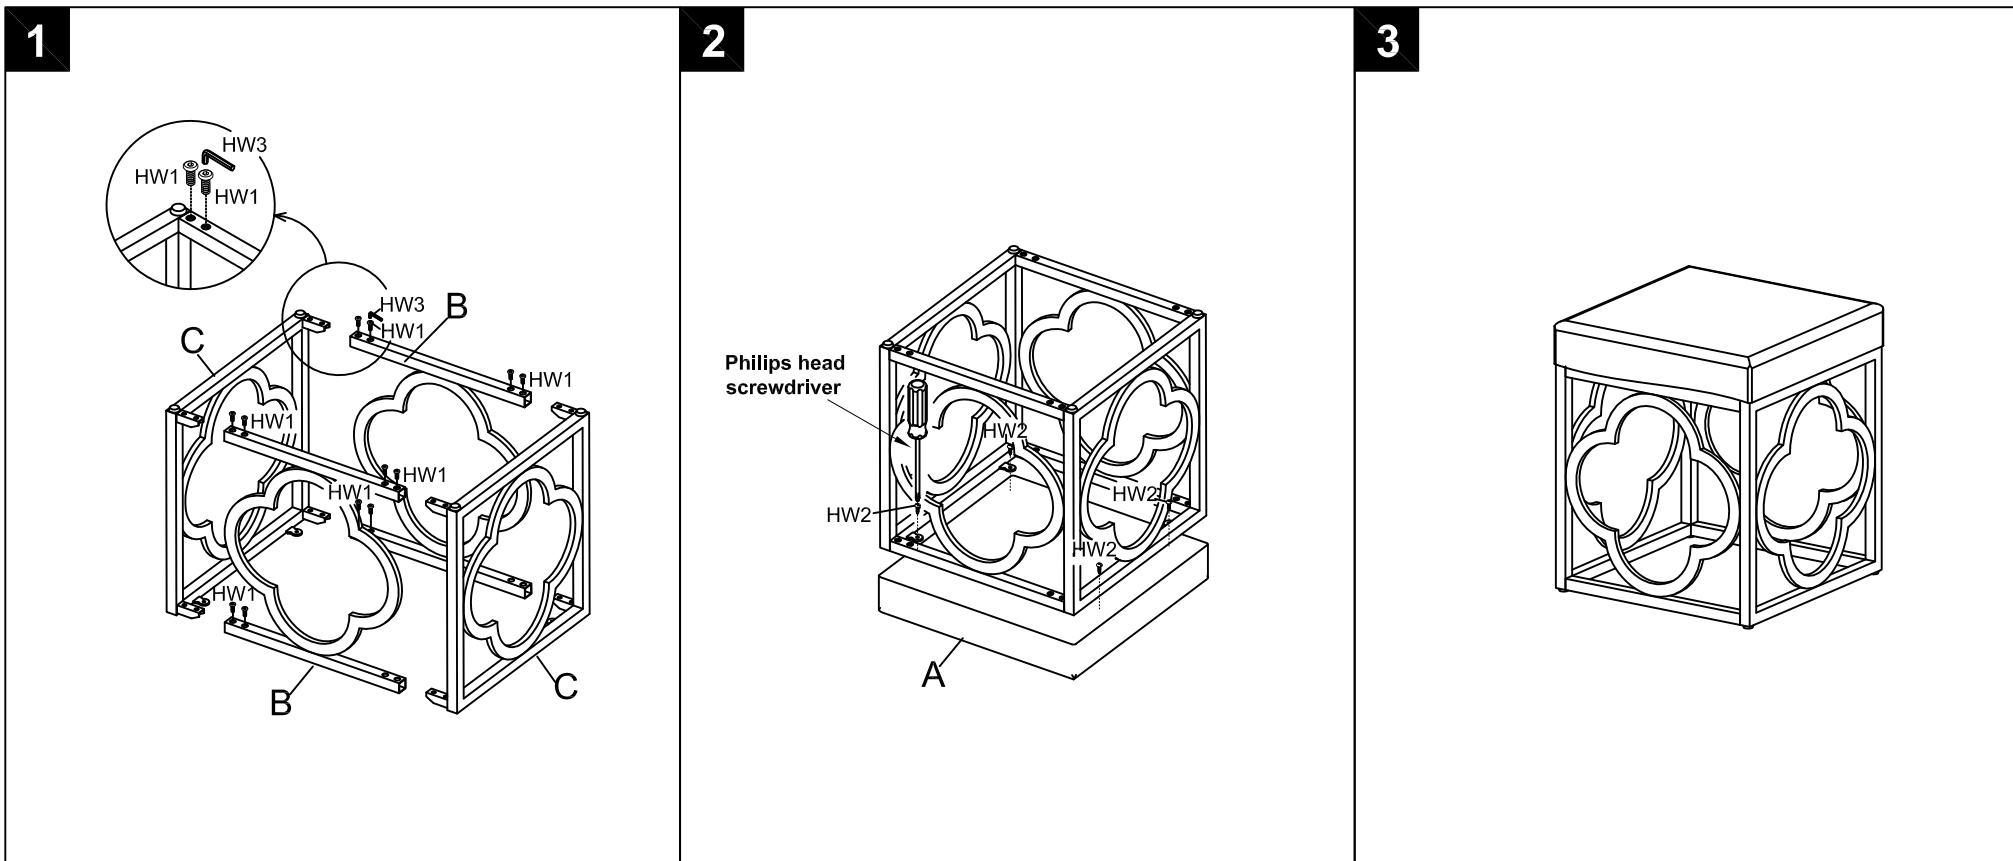

Step 1

Insert the protruding part of 2*Closed Side Frame (C) into the tube of 2*Open Side Frame (B). Then use Allen Key (HW3) to lock through holes on Open Side Frame (B) with 16*Hex Socket Bolts (HW1), as picture.

Step 2

Attach the bottom side of Seat Cushion (A) to the assembled metal frame, Use Philips head screwdriver (tool is not included) to lock with 4*Wood Screw (HW2), as picture.

Step 3

Straighten up the assembled product, Assembly is completed.