CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

E

F

G

Η

K

* Please make sure that you have all parts indicated before you begin assembly of this item

M8x45

(6 x 20)

- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Support Leg

Frame side

Seat Cushion

Back Cushion

Screw

Screw

Bolt

Part List and Hardware List



Weight Capacity: 484 Ibs

Warning: Do not stand on chair

Warning: Do not over torque bolts / screws







PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Legs Front		2X	L	Bolt	(8 x 30)	4X
В	Legs back		2X	М	Sleeve Nut	(8 x 15)	6X
С	Frame Seat		1X	N	Washer plastic	0	4X
D	Frame back		1X	0	Allen Key	LG4	2X
	ĺ		1,70	Madal# DATZ200			

2X

2X

1X

2X

4X

8X

6X

Model# PAT7300

Product Dimensions:61.8" W x 28.35" D x 30.1" H



PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

Step 1
Tighten screws (I) with allen key (O) to attach back legs (A) and Support leg (E)


Step 2 Tighten Screws (J) with allen key (O) to attach Leg extra (A),(B) seat frame (C).

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

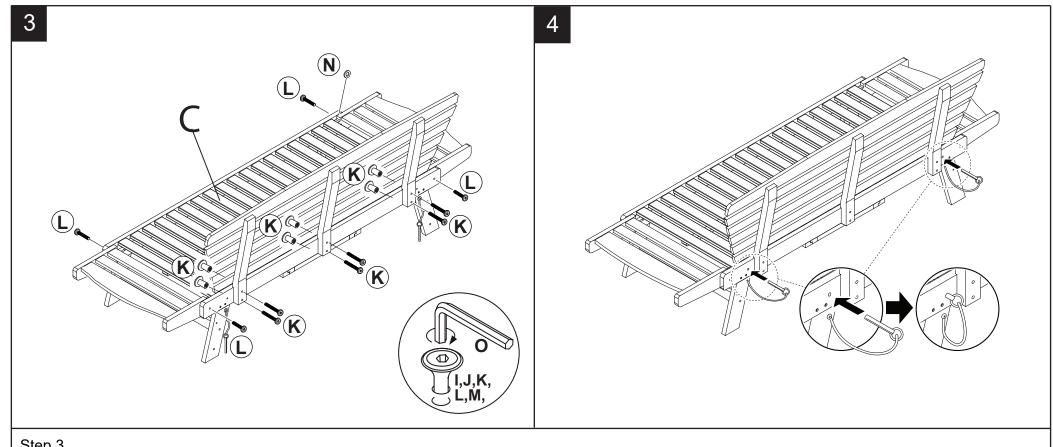

Step 3

Step 3.1 Tighten bolt (L) and Washer(N) with allen key (O) to attach Seat frame (C) and Side frame (F).

Step 3.2 Tighten bolt (K) and Sleeve(M) with allen key (O) to back frame (D) and seat frame (C)


Step 4 SAFETY LOCK

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

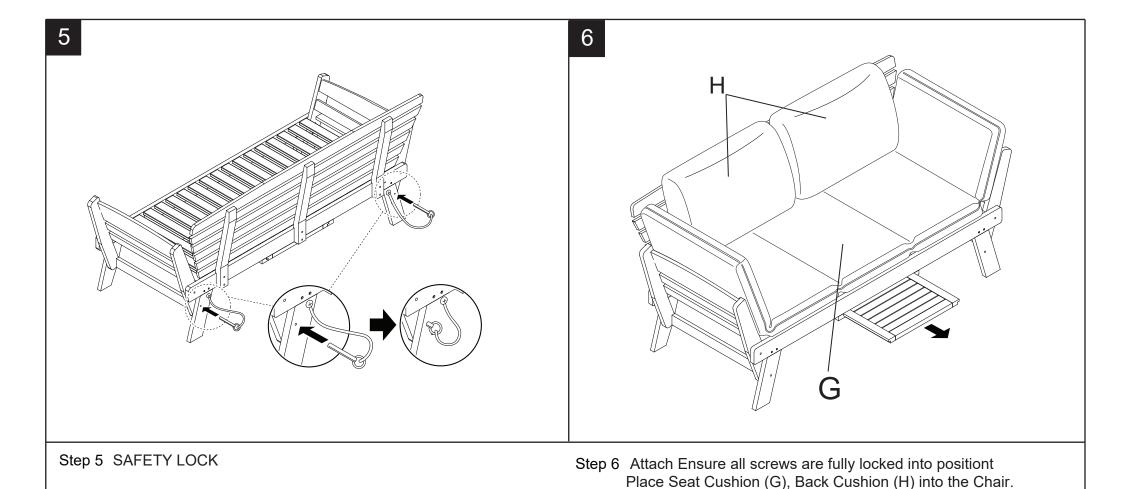

The Chair is ready to be used