




Assembly Instruction

CAUTION: Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

ITEM#:PND4081A

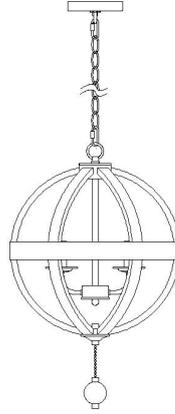

Care and Cleaning


To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Mounting Plate		1X	H	Canopy Nut		1X
B	ground screw		1X	I	chain		1X
C	machine screw		2X	K	bulb		3X
D	short threaded rod		1X	M	ixture body		1X
E	wire connector		3X	N	metal cover		1X
F	canopy		1X	O	decorative pendant		1X
G	hang loop		1X				

Installation

Step 1

Hang the chain(I) on round loop(J) and hang loop(G),make lead wire over through the canopy(F).


Step 2

Install the mounting plate(A) to the junction box with machine screw (C).


Step 3 Wire connection

Make wire connections, with wire connectors(E), following the reference chart listed below.

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:
Black	White
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor



*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)

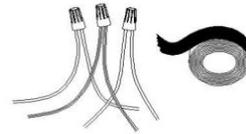

Grounding Instructions:

a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.

b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

Step 4

Orient the ceiling canopy(F) so that the short threaded rod(D) protruding from the mounting bracket go into the holes in the canopy, then secure it with the canopy nut(H).

Step 5

Put the matel cover(N) on ixture body (M) and fix it by decorative pendant(O)

Step 6


Insert the bulbs (K) into the sockets(L)

PLEASE USE TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 13-WATT OR LED BULB MAX 9-WATT

THERE ARE 3PCS LED 4-WATT BULB IN THE BOX

Step 7

Consult a qualified electrician to ensure correct branch circuit conductor.

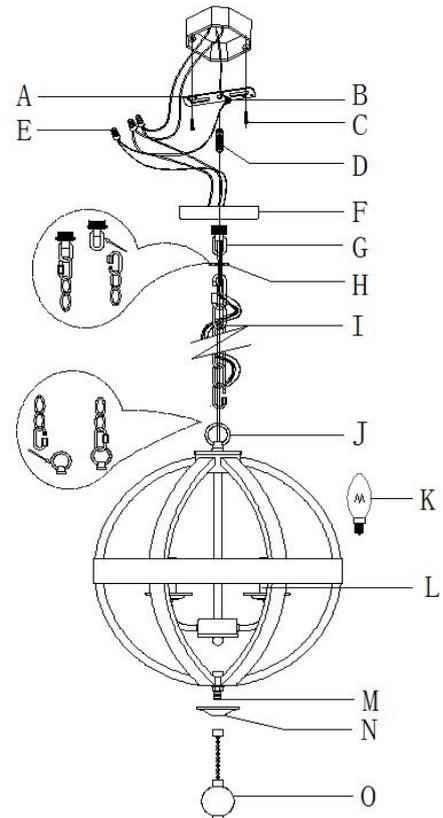

ENJOY YOUR LAMP