
Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070

REXSIE TUFTED HEADBOARD KING BED

SFV1802-K

Assembly Instructions

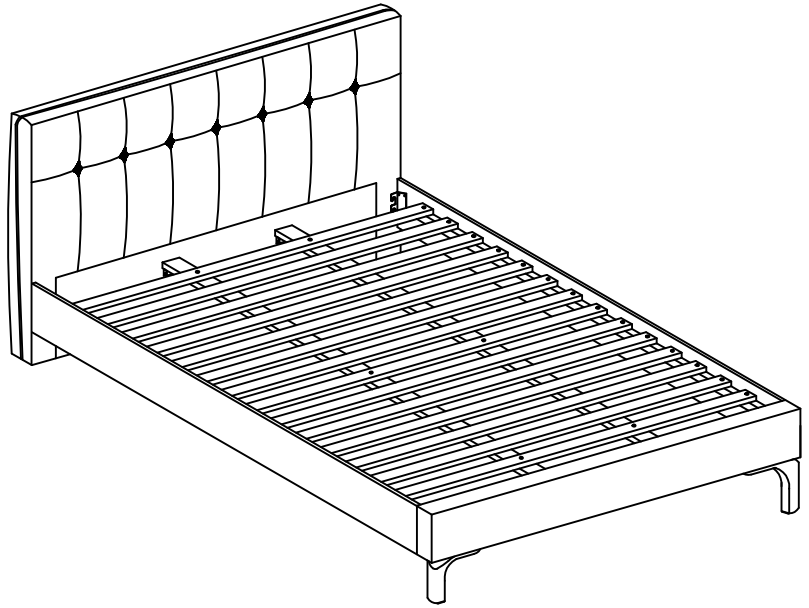

SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new bed.

Parts List

A x 1
HEADBOARD



B x 1
FOOTBOARD



C x 1
SIDE RAILS



D x 4
LEGS




E x 2
CENTER SUPPORT RAIL



F x 4
CENTER LEGS




G x 1
14 SLATS




Hardware List


HW1 x 4
LEVELER



HW2 x 8
JCB BOLT M8 X 20mm



HW3 x 8
JCB BOLT M6 X 20mm



HW4 x 4
JCB BOLT M6 X 40mm



HW5 x 1
ALLEN KEY 100mm



HW6 x 1
ALLEN KEY 70mm



HW7 x 4
SCREW M4 X 25mm



HW8 x 34
SCREW M4 X 32mm




HW9 x 8
M6 FLAT WASHER




1

Place the Flat washers (HW9) on the JCB bolts (HW3). Attach the legs (D) to the headboard (A) and the footboard (B) by using the Allen key (HW5) to screw in the JCB bolts (HW3) with the washers as shown.

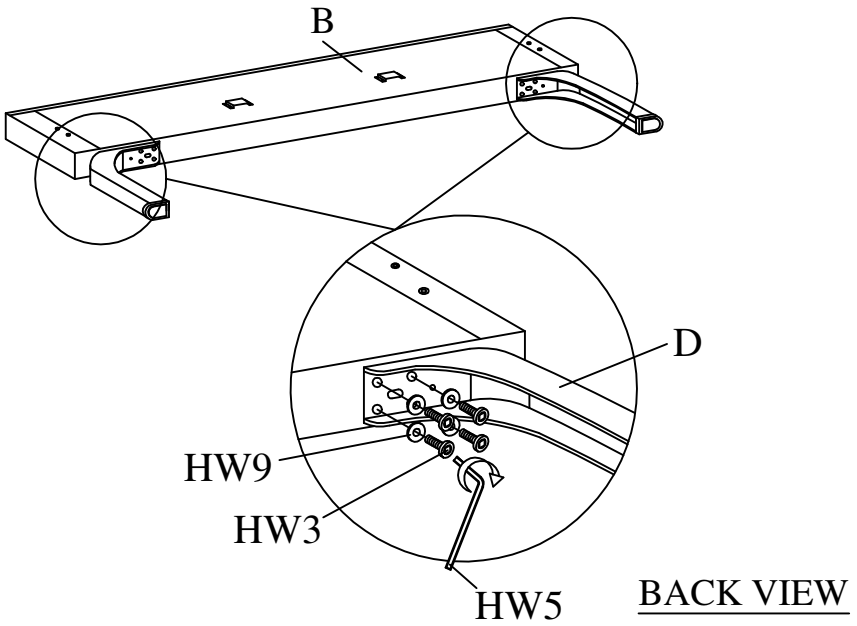


2

Use the Allen key (HW6) to screw in the JCB bolts (HW2) into the headboard (A) and footboard (B) as shown, but don't fully tighten them. Slide the metal brackets on the siderails (C) onto the bolts (HW2) on the headboard (A) and footboard (B).

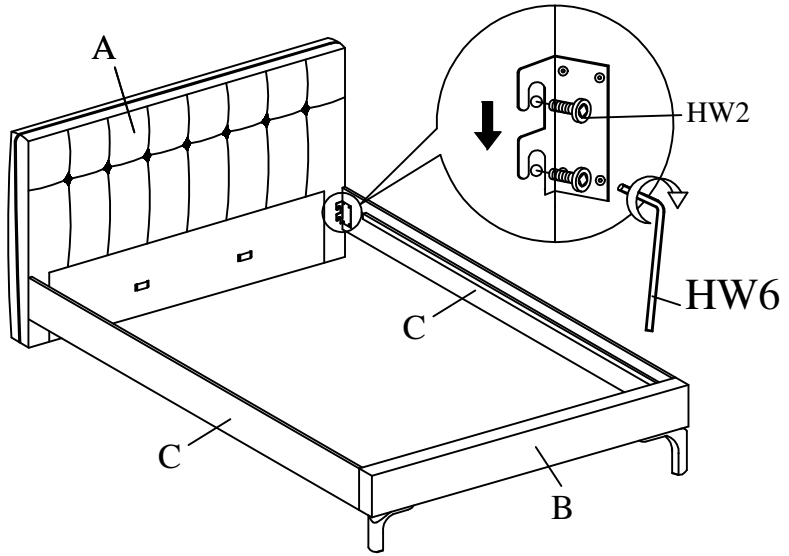

3


Attach the center support legs (F) to the center support rails (E) by using the Allen key (HW5) to screw in the bolts (HW4) as shown. Screw in the levelers (HW1) into the bottom of the center support legs (F).

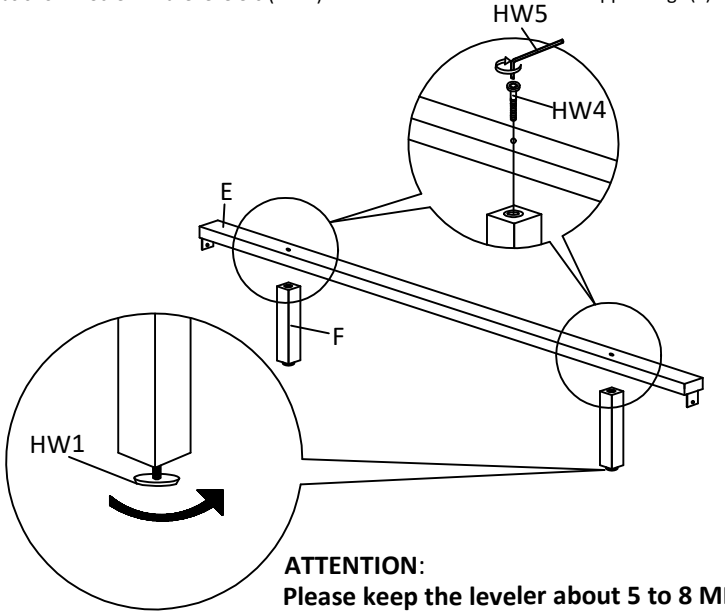

ATTENTION:
Please keep the leveler about 5 to 8 MM away from the floor.

4


Attach the assembled center support rails to the headboard (A) and footboard (B) by using a Philips Head screwdriver (not included) to screw in the screws (HW7) as shown.

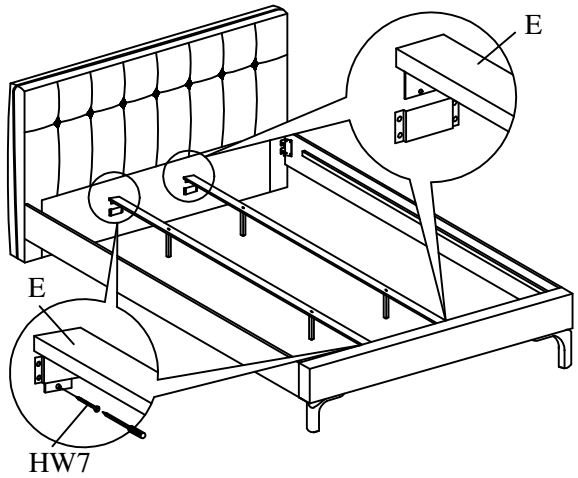

ATTENTION : Please ensure that (HW7) screw are being attached as the AI shows to avoid the base collapsing.


5

Use the Allen key (HW6) to fully tighten the bolts (HW2) in the 4 corners. Attach the slats (G) to the center support rails and the siderails by using a Philips Head screwdriver (not included) to screw in the 34 screws (HW8) in the spots shown below. Adjust the levelers as needed to make the bed level.

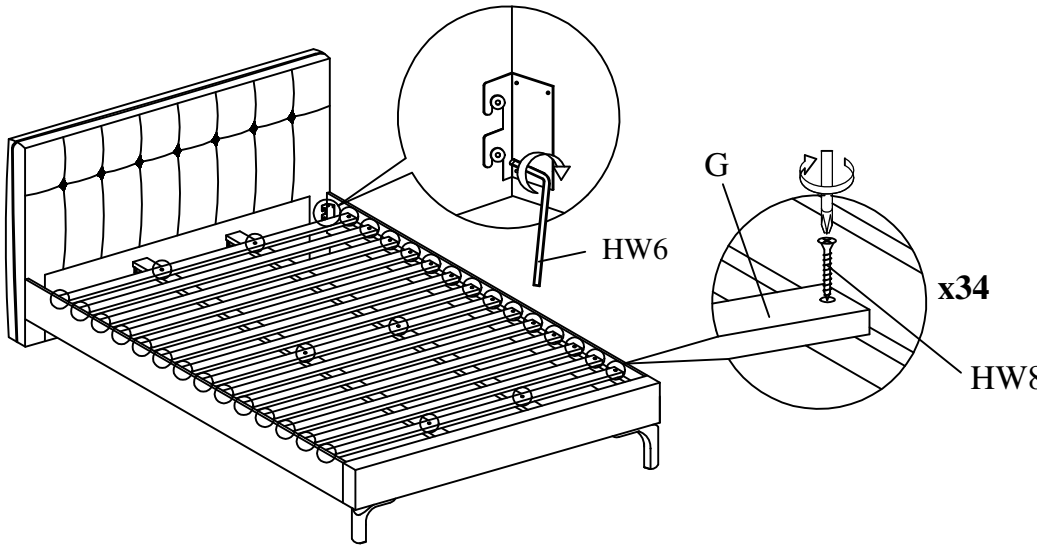

6


Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

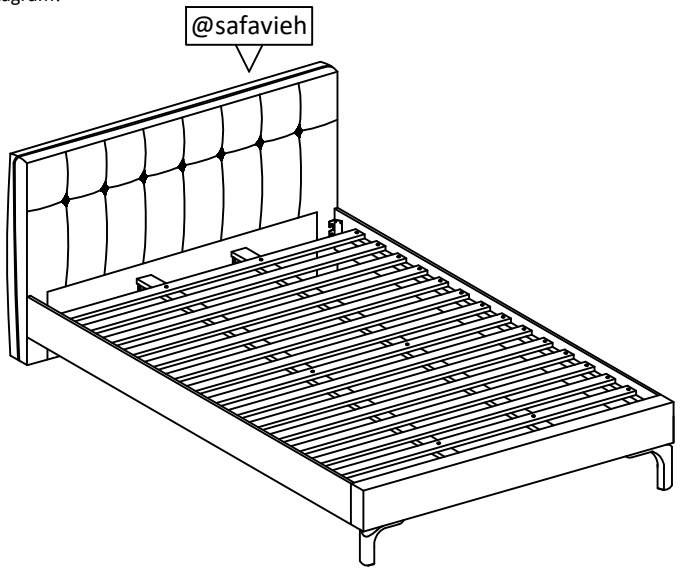

REXSIE TUFTED HEADBOARD QUEEN BED

SFV1802-Q

Assembly Instructions

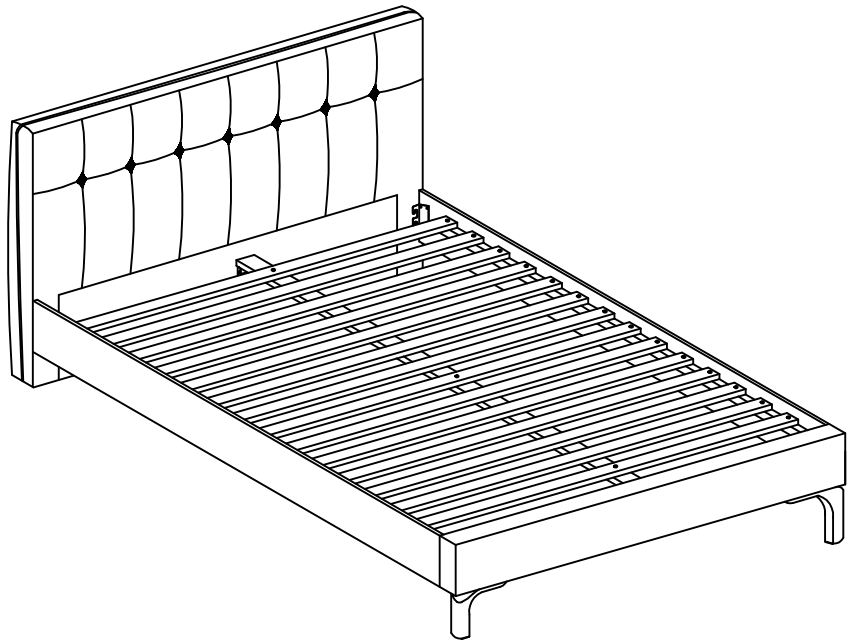

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070

SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new bed.

Parts List

A x 1
HEADBOARD



B x 1
FOOTBOARD



C x 1
SIDE RAILS



D x 4
LEGS




E x 1
CENTER SUPPORT RAIL



F x 2
CENTER LEGS




G x 1
14 SLATS




Hardware List


HW1 x 2
LEVELER



HW2 x 8
JCB BOLT M8 X 20mm



HW3 x 8
JCB BOLT M6 X 20mm



HW4 x 2
JCB BOLT M6 X 40mm



HW5 x 1
ALLEN KEY 65mm



HW6 x 1
ALLEN KEY 70mm



HW7 x 2
SCREW M4 X 25mm



HW8 x 31
SCREW M4 X 32mm




HW9 x 8
M6 FLAT WASHER




1

Place the Flat washers (HW9) on the JCB bolts (HW3). Attach the legs (D) to the headboard (A) and the footboard (B) by using the Allen key (HW5) to screw in the JCB bolts (HW3) with the washers as shown.

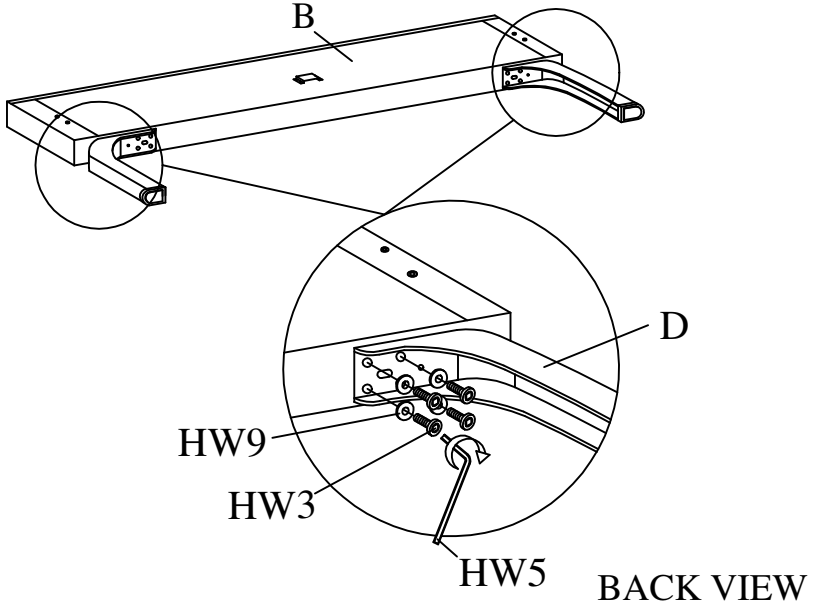


2

Use the Allen key (HW6) to screw in the JCB bolts (HW2) into the headboard (A) and footboard (B) as shown, but don’t fully tighten them. Slide the metal brackets on the siderails (C) onto the bolts (HW2) on the headboard (A) and footboard (B).

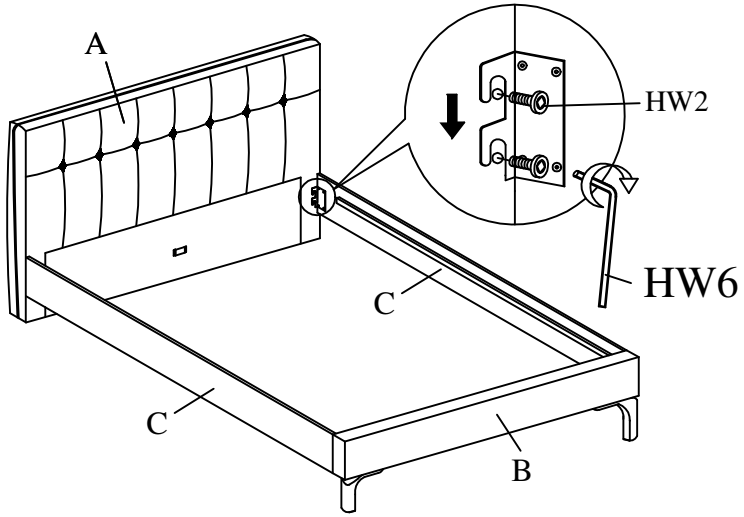

3


Attach the center support legs (F) to the center support rails (E) by using the Allen key (HW5) to screw in the bolts (HW4) as shown. Screw in the levelers (HW1) into the bottom of the center support legs (F).

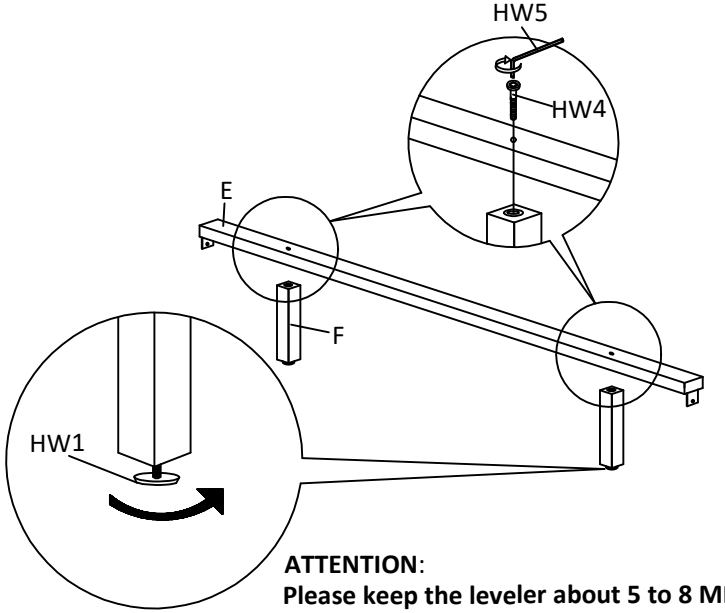

ATTENTION:
Please keep the leveler about 5 to 8 MM away from the floor.

4


Attach the assembled center support rails to the headboard (A) and footboard (B) by using a Philips Head screwdriver (not included) to screw in the screws (HW7) as shown.

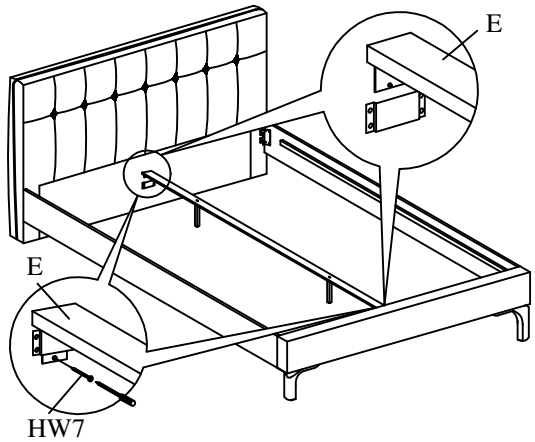

ATTENTION : Please ensure that (HW7) screw are being attached as the AI shows to avoid the base collapsing.

5

Use the Allen key (HW6) to fully tighten the bolts (HW2) in the 4 corners. Attach the slats (G) to the center support rails and the siderails by using a Philips Head screwdriver (not included) to screw in the 31 screws (HW8) in the spots shown below. Adjust the levelers as needed to make the bed level.

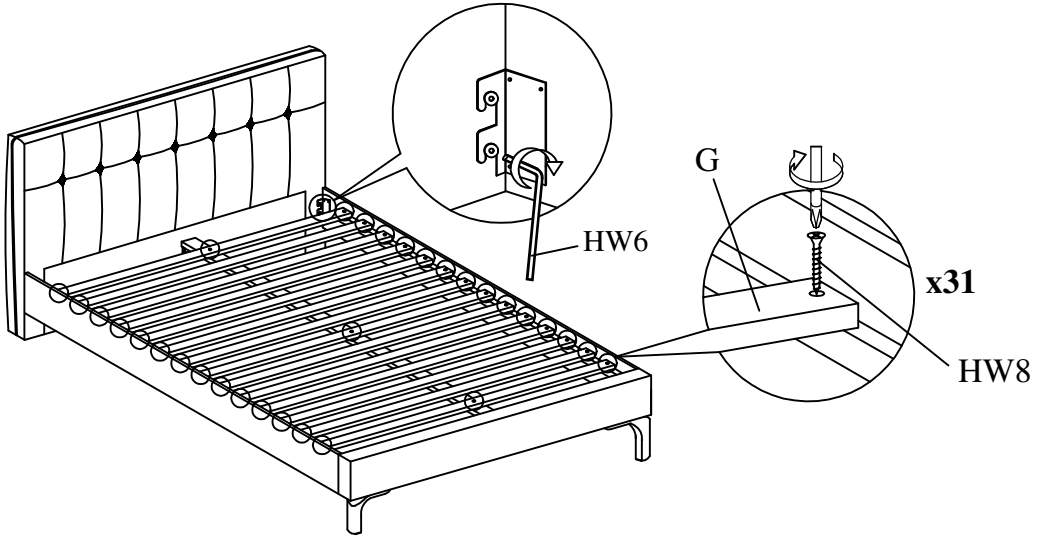

6

Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

