
SOLACINA WOOD FRAME KING BED

SFV1803-K

Assembly Instructions

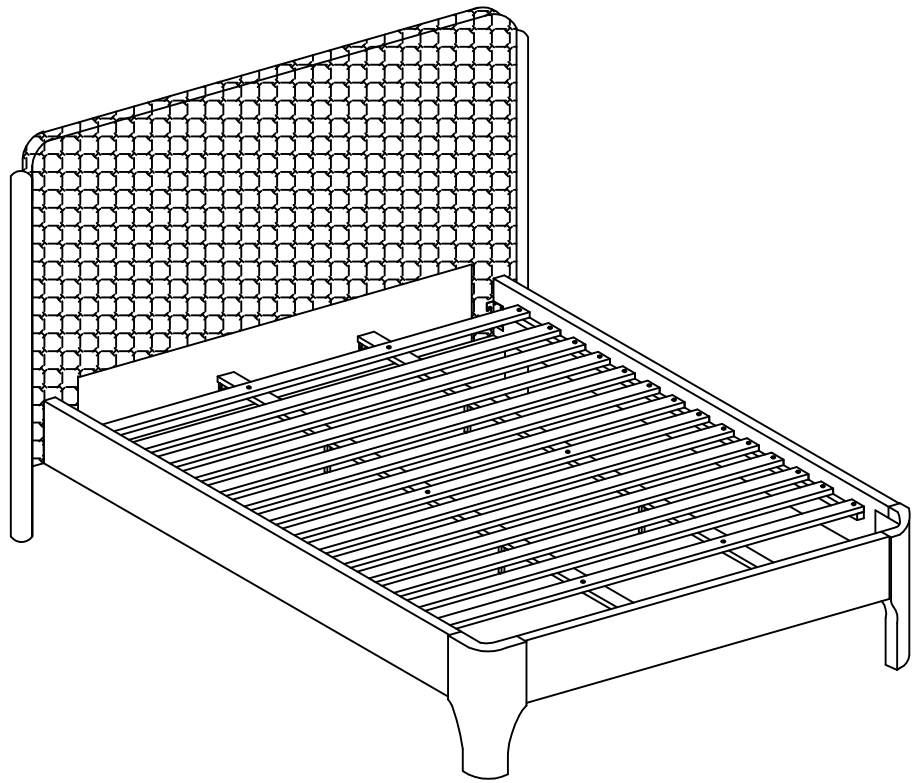

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070


SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new bed.

Parts List


A x 1
HEADBOARD



B x 1
FOOTBOARD



C x 1
SIDE RAILS (LEFT)



D x 1
SIDE RAILS (RIGHT)



E x 2
HEADBOARD LEGS

F x 2
FOOTBOARD LEGS




G x 2
CENTER SUPPORT RAIL



H x 4
CENTER LEGS



I x 1
14 SLATS



J x 2
L-BRACKET



Hardware List


HW1 x 4
LEVELER




HW2 x 16
JCB BOLT M8 X 20mm



HW3 x 4
JCB BOLT M6 X 40mm



HW4 x 6
JCB BOLT M6 X 50mm



HW5 x 1
ALLEN KEY 65mm



HW6 x 1
ALLEN KEY 70mm



HW7 x 4
SCREW M3.5 X 16mm



HW8 x 34
SCREW M4 X 32mm



HW9 x 6
M6 SPRING WASHER



HW10 x 6
M6 FLAT WASHER




HW11 x 12
M8 SPRING WASHER



HW12 x 12
M8 FLAT WASHER

1


Unzip the black fabric on the back of the headboard.

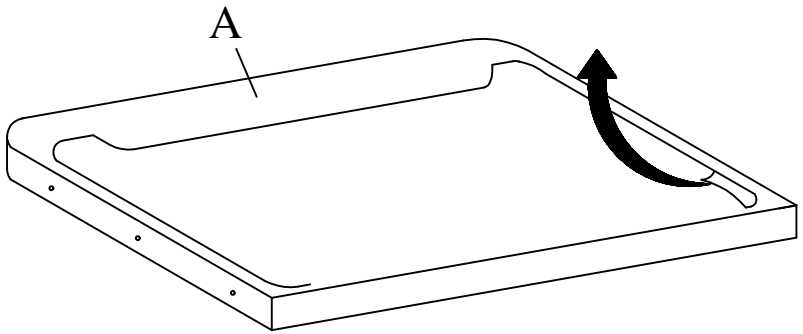

BACK VIEW


2

Place the Spring washers (HW9) and the Flat washers (HW10) on the JCB bolts (HW4) in the order shown below. Attach the headboard legs (E) to the headboard (A) by using the Allen key (HW5) to screw in the JCB bolts (HW4) with the washers as shown below.

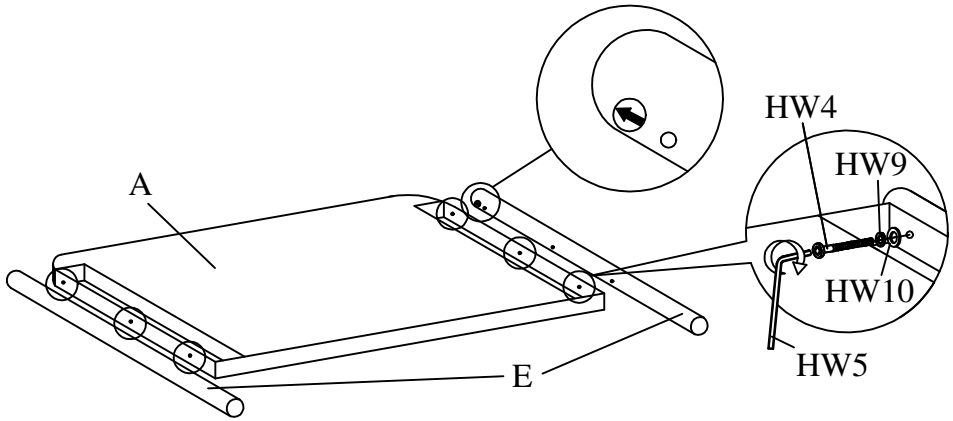


BACK VIEW


Place the Spring washers (HW11) and the Flat washers (HW12) on the JCB bolts (HW2) in the order shown below. Attach the footboard legs (F) to the footboard (B) by aligning the screw holes on the L-bracket (J) to the screw holes on the legs and footboard and then use the Allen key (HW6) to screw in the JCB bolts (HW2) as shown. Do not fully tighten the bolts.

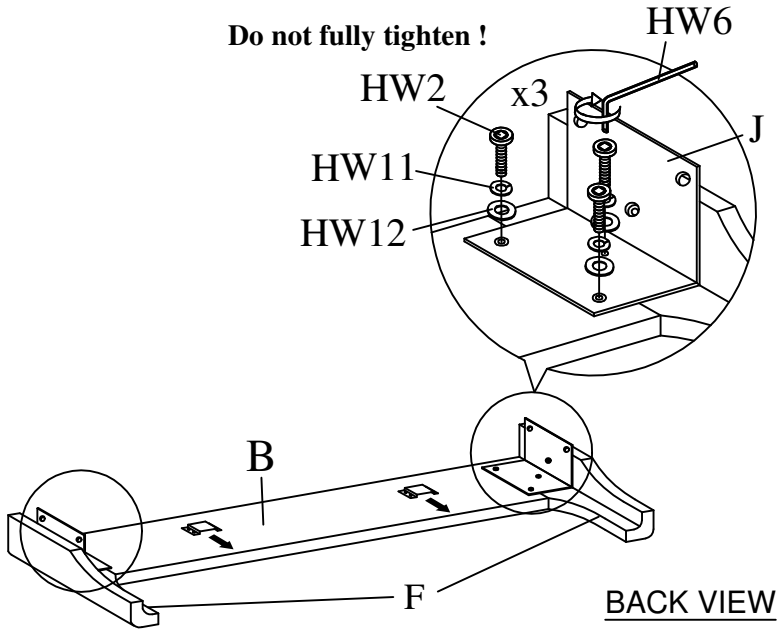


Attach the siderails (C&D) to the assembled footboard by using the Allen key (HW6) to screw in the JCB bolts (HW2) as shown. Do not fully tighten the bolts.

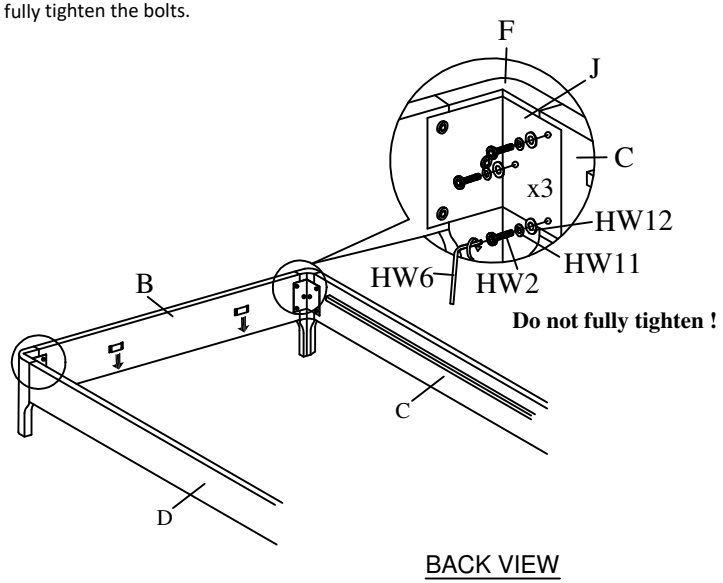

Use the Allen key (HW6) to screw in the JCB bolts (HW2) into the headboard as shown, but don't fully tighten. Slide the metal brackets on the siderails (C&D) onto the bolts (HW2) in the headboard.

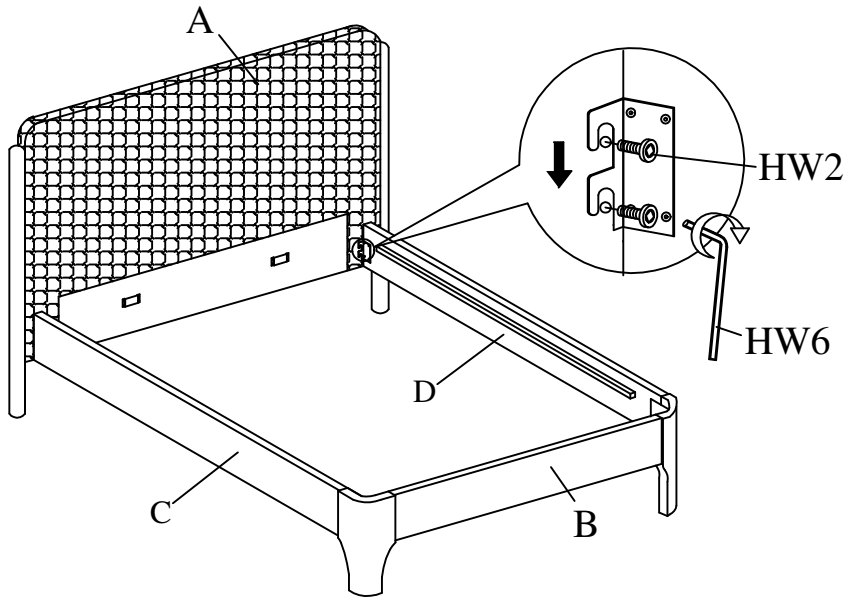


Attach the center support legs (H) to the center support rails (G) by using the Allen key (HW5) to screw in the bolts (HW3) as shown. Screw in the levelers (HW1) into the bottom of the center support legs (H).

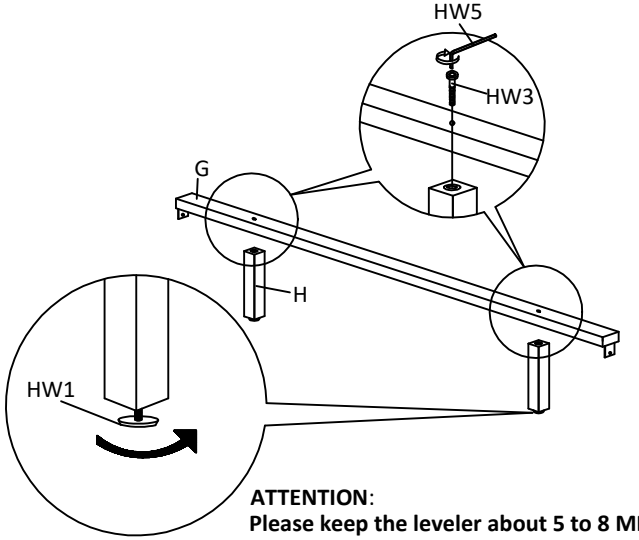

ATTENTION:
Please keep the leveler about 5 to 8 MM away from the floor.

7


Attach the assembled center support rails to the headboard (A) and footboard (B) by using a Philips Head screwdriver (not included) to screw in the screws (HW7) as shown.

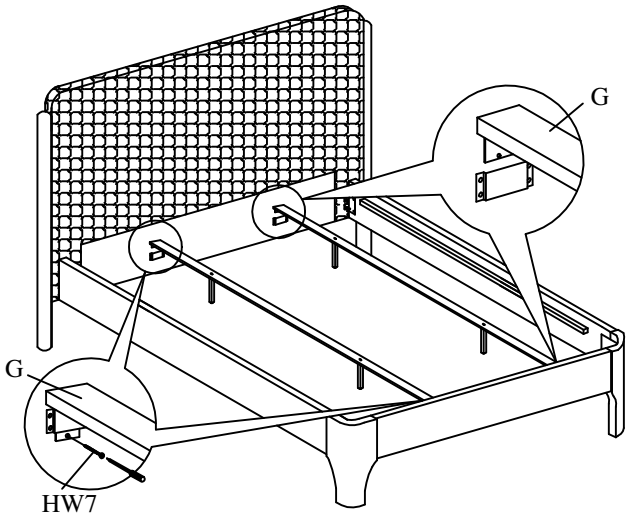

ATTENTION : Please ensure that (HW7) screw are being attached as the AI shows to avoid the base collapsing.

8


Use the Allen key (HW6) to fully tighten the bolts (HW2) in the 4 corners. Attach the slats (I) to the center support rails and the siderails by using a Philips Head screwdriver (not included) to screw in the 34 screws (HW8) in the spots shown below. Adjust the levelers as needed to make the bed level.

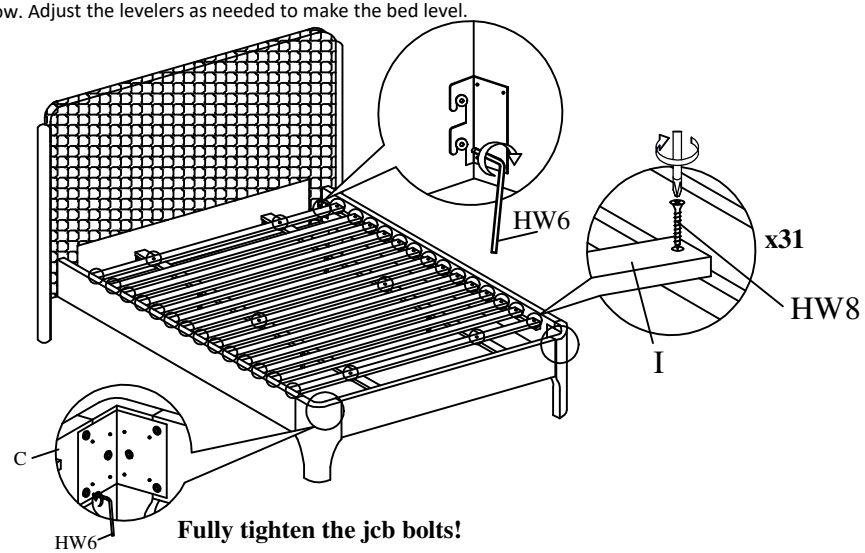

Fully tighten the jcb bolts!

9


Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

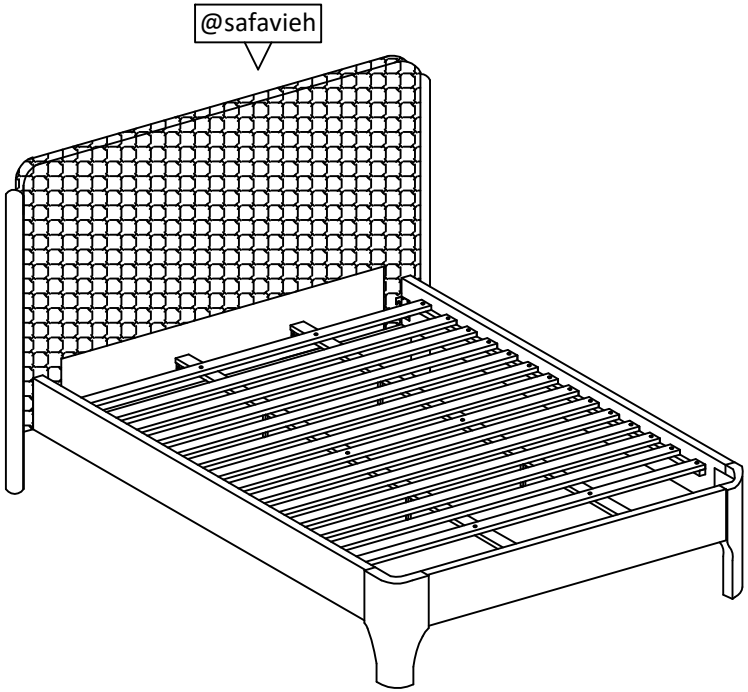

SOLACINA WOOD FRAME QUEEN BED

SFV1803-Q

Assembly Instructions

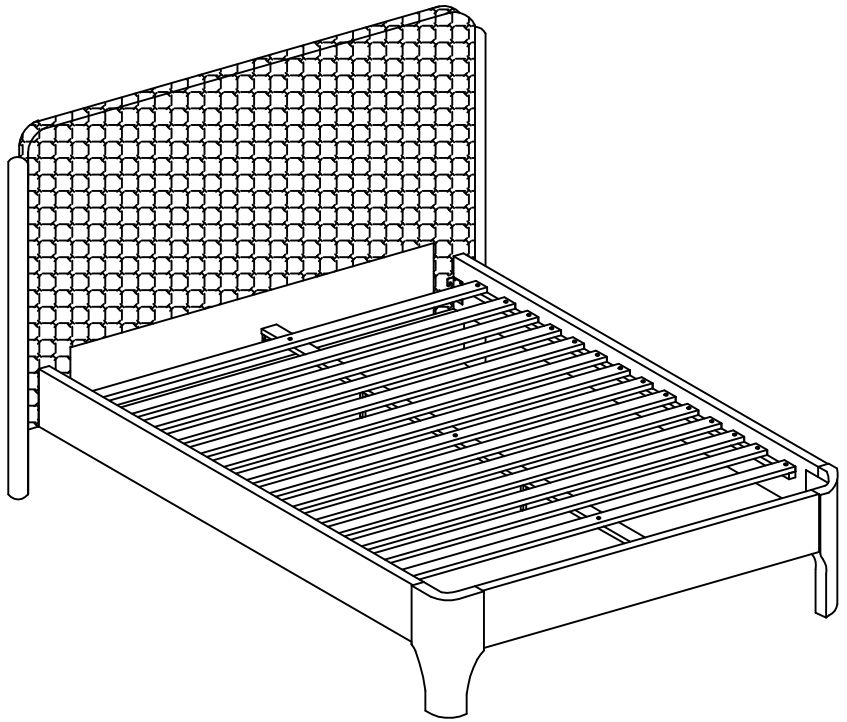

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070


SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new bed.

Parts List


A x 1
HEADBOARD



B x 1
FOOTBOARD



C x 1
SIDE RAILS (LEFT)



D x 1
SIDE RAILS (RIGHT)



E x 2
HEADBOARD LEGS

F x 2
FOOTBOARD LEGS




G x 1
CENTER SUPPORT RAIL



H x 2
CENTER LEGS



I x 1
14 SLATS



J x 2
L-BRACKET



Hardware List


HW1 x 2
LEVELER




HW2 x 16
JCB BOLT M8 X 20mm



HW3 x 2
JCB BOLT M6 X 40mm



HW4 x 6
JCB BOLT M6 X 50mm



HW5 x 1
ALLEN KEY 65mm



HW6 x 1
ALLEN KEY 70mm



HW7 x 2
SCREW M3.5 X 16mm



HW8 x 31
SCREW M4 X 32mm



HW9 x 6
M6 SPRING WASHER



HW10 x 6
M6 FLAT WASHER



HW11 x 12
M8 SPRING WASHER




HW12 x 12
M8 FLAT WASHER



1


Unzip the black fabric on the back of the headboard.

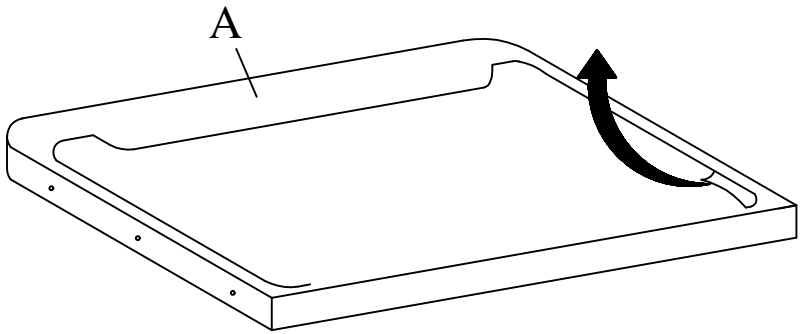

BACK VIEW


2

Place the Spring washers (HW9) and the Flat washers (HW10) on the JCB bolts (HW4) in the order shown below. Attach the headboard legs (E) to the headboard (A) by using the Allen key (HW5) to screw in the JCB bolts (HW4) with the washers as shown below.

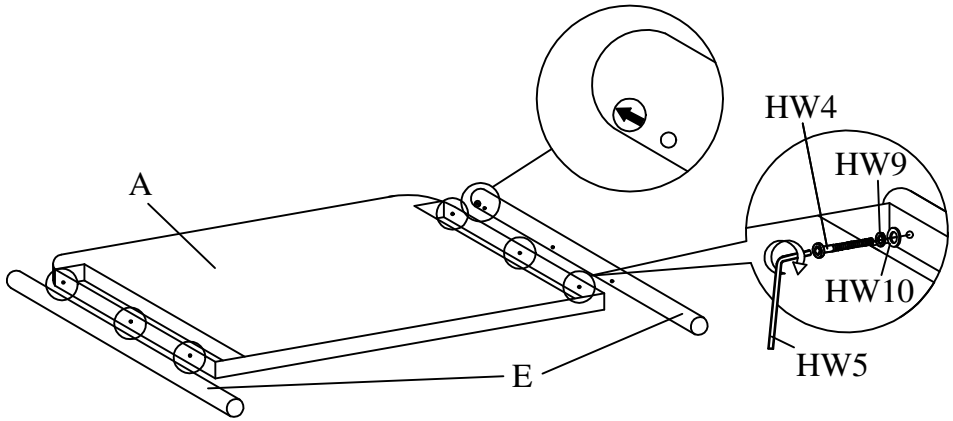


BACK VIEW


Place the Spring washers (HW11) and the Flat washers (HW12) on the JCB bolts (HW2) in the order shown below. Attach the footboard legs (F) to the footboard (B) by aligning the screw holes on the L-bracket (J) to the screw holes on the legs and footboard and then use the Allen key (HW6) to screw in the JCB bolts (HW2) as shown. Do not fully tighten the bolts.

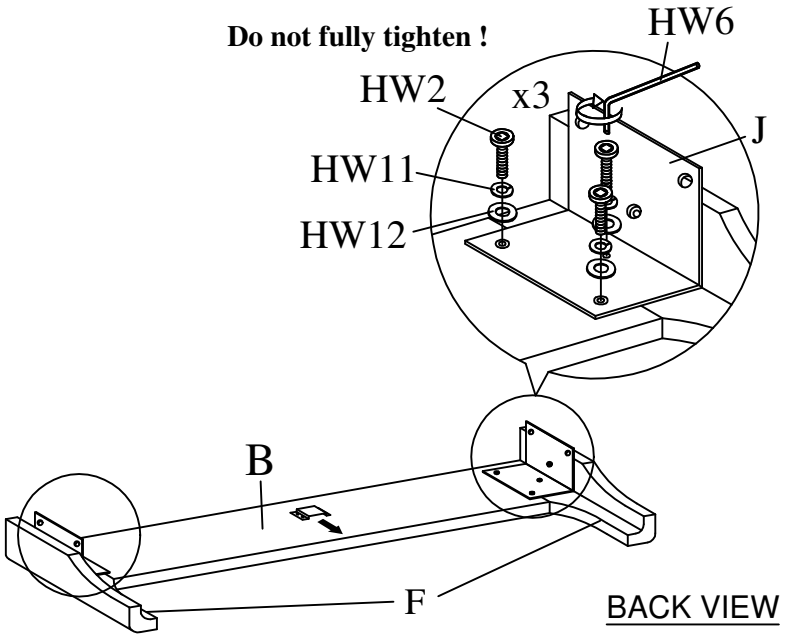


Attach the siderails (C&D) to the assembled footboard by using the Allen key (HW6) to screw in the JCB bolts (HW2) as shown. Do not fully tighten the bolts.

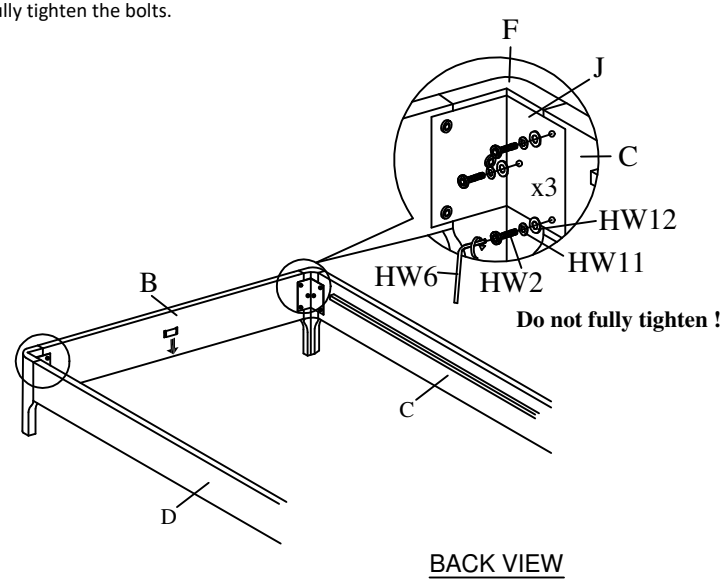

Use the Allen key (HW6) to screw in the JCB bolts (HW2) into the headboard as shown, but don't fully tighten. Slide the metal brackets on the siderails (C&D) onto the bolts (HW2) in the headboard.

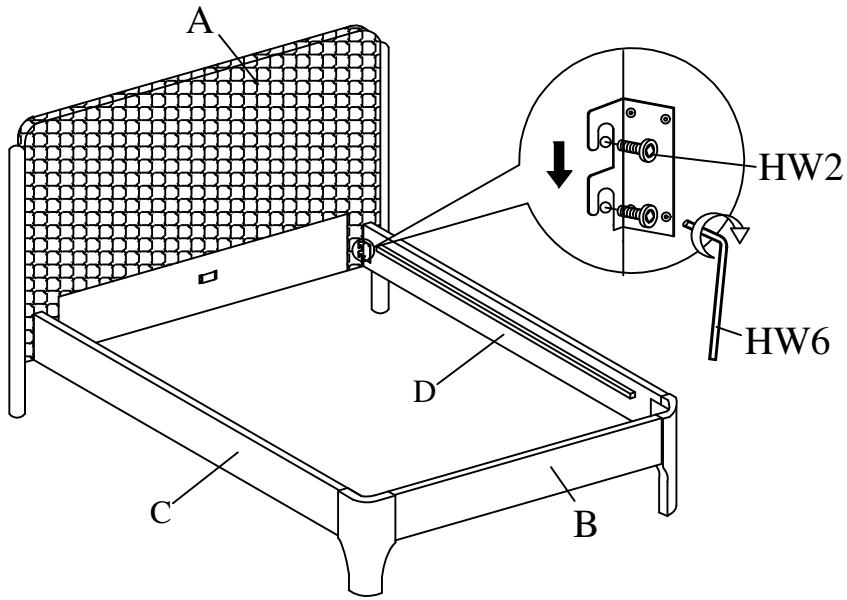


Attach the center support legs (H) to the center support rails (G) by using the Allen key (HW5) to screw in the bolts (HW3) as shown. Screw in the levelers (HW1) into the bottom of the center support legs (H).

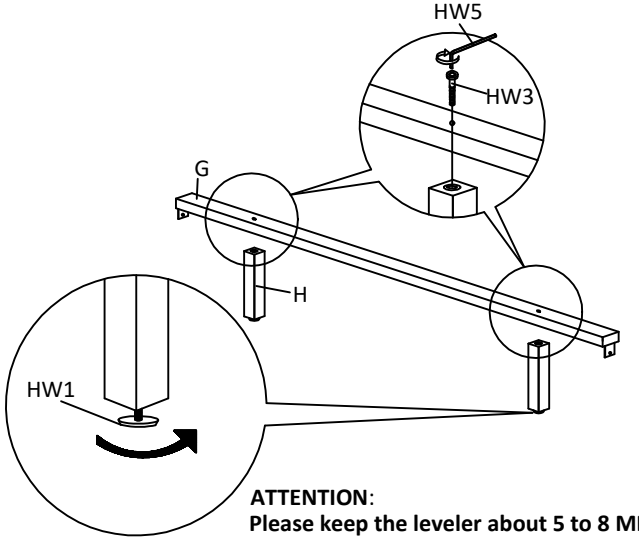

ATTENTION:
Please keep the leveler about 5 to 8 MM away from the floor.

7


Attach the assembled center support rails to the headboard (A) and footboard (B) by using a Philips Head screwdriver (not included) to screw in the screws (HW7) as shown.

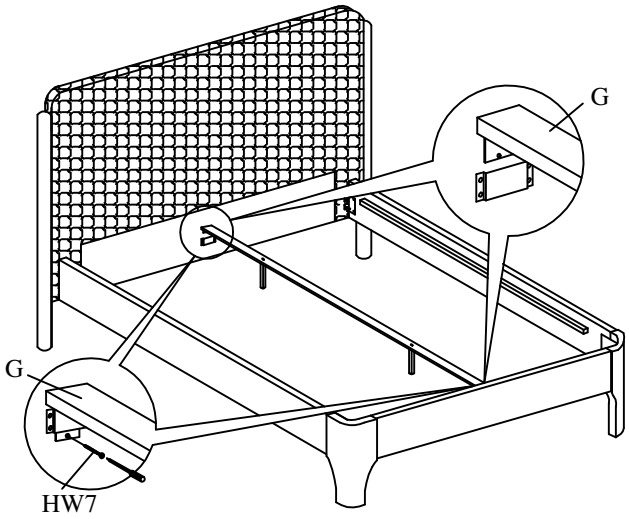

ATTENTION : Please ensure that (HW7) screw are being attached as the AI shows to avoid the base collapsing.

8

Use the Allen key (HW6) to fully tighten the bolts (HW2) in the 4 corners. Attach the slats (I) to the center support rails and the siderails by using a Philips Head screwdriver (not included) to screw in the 31 screws (HW8) in the spots shown below. Adjust the levelers as needed to make the bed level.

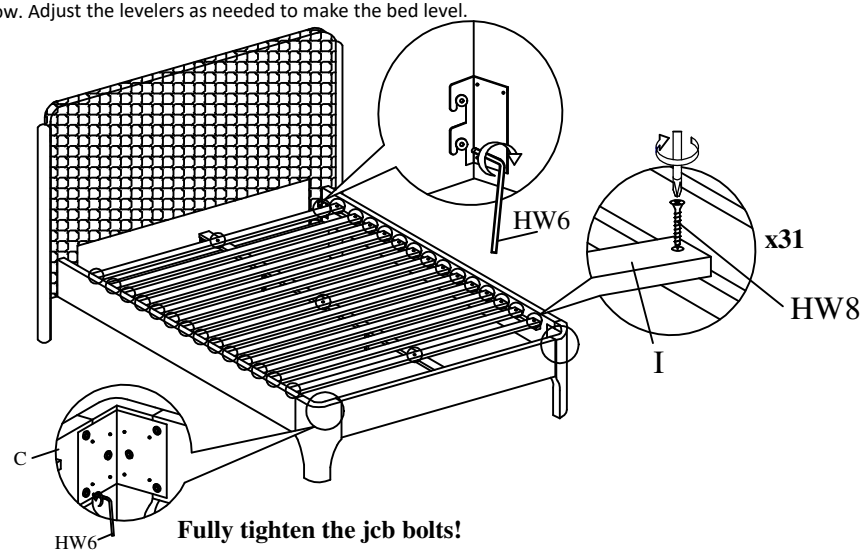

Fully tighten the jcb bolts!

9

Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

