

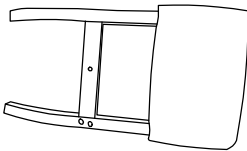






## CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- \* This item may require periodic tightening.
- \* Do not tighten bolts until completely assembled.

## Part List and Hardware List

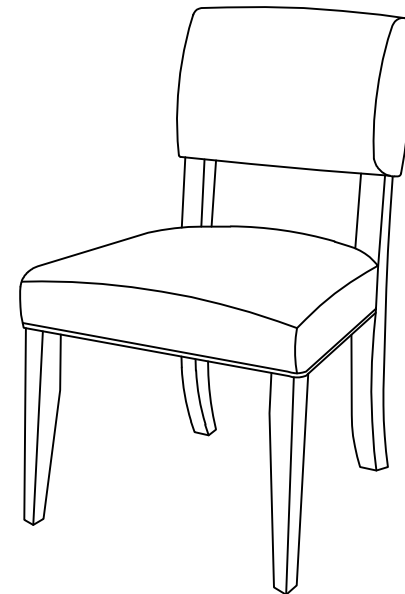
PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Chair Back		1X
B	Seat Cushion		1X
C	Front Leg		2X
HW1	Hex Socket Bolt	 5/16"-18 x 2"	4X
HW2	Hex Socket Bolt	 5/16"-18 x 3"	4X
HW3	Hex Socket Bolt	 5/16"-18 x 1-1/2"	4X
HW4	Allen Key	 M4	4X

# SAFAVIEH

## C O U T U R E

Model# SFV2107

Product Dimensions: 21"W\*23.75"D\*34.75"H




**Weight Capacity : 275lbs**  
**WARNING:DO NOT STAND ON THE CHAIR**

## PREPARATION

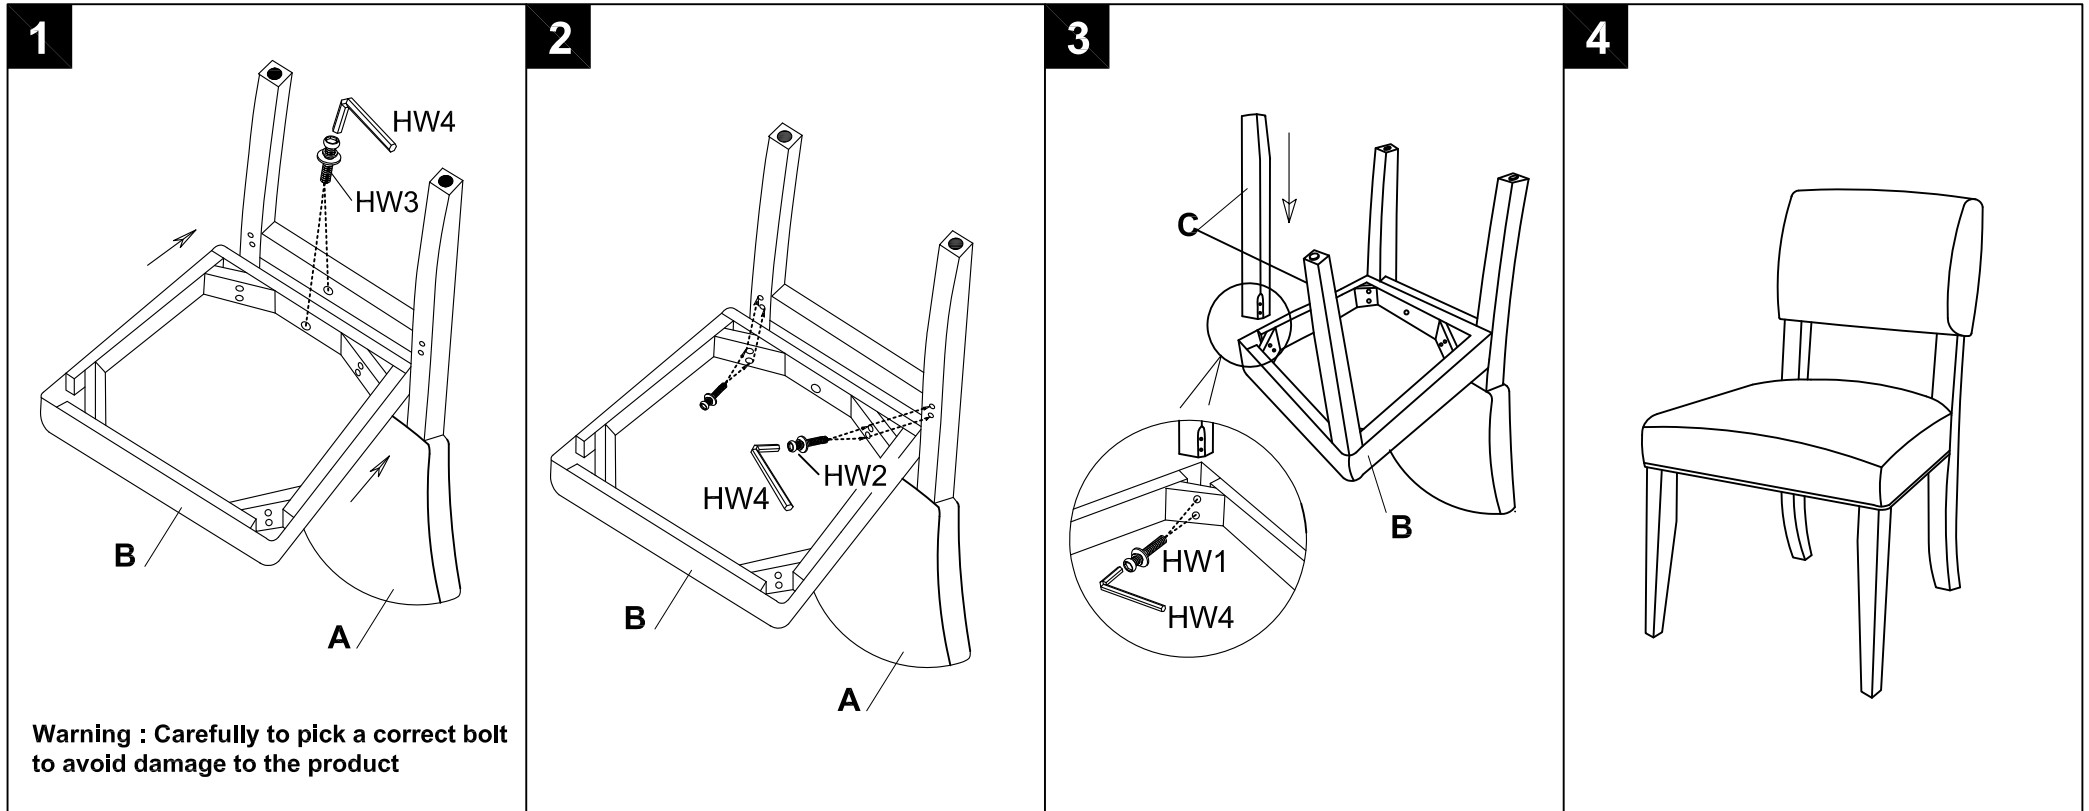Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (included): Allen key



### Step 1:

Attach Seat Cushion (B) to the Chair Back (A), Using Allen key (HW4) to lock with 1\*Hex Socket Bolt (HW3) into the center of seat cushion to assembly with chair back.

### Step 2:

Then using Allen key (HW4) to lock in 4\*Hex Socket Bolt (HW2) to the back leg of chair back (A), as picture.

### Step 3:

Attach 2\*Front legs (C) to the seat cushion (B), Using Allen key (HW4) to lock with 4\*Hex Socket Bolt (HW1).

### Step 4:

Straighten up the assembled product, Assembly is completed.