NOTICE

* Please make sure that you have all parts indicated and are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance .
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly customer care team is always here to help . Please email **customersupport@safavieh.com**

PREPARATION

* Before beginning assembly of product , make sure all parts are present . Compare parts with parts contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly time : 10 minutes
* Tools Required for Assembly (included): Allen key



CARE AND MAINTENANCE


*Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
*The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH COUTURE

Item# **SFV5746A**
Product dimensions: 68.00"W* 18.00"D*26.00"H

Part List and Hardware List

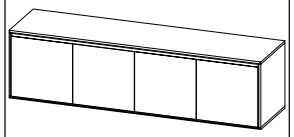PIECE	DESCRIPTION	PICTURE	QUANTITY
P	Cabinet		1X
Q	Leg		2X
Hw1	Allen bolt 6 X 1.60 X 16 mm		16X
Hw2	Flat washer 16 x 8 mm		16X
Hw3	Allen key 4 mm		1X

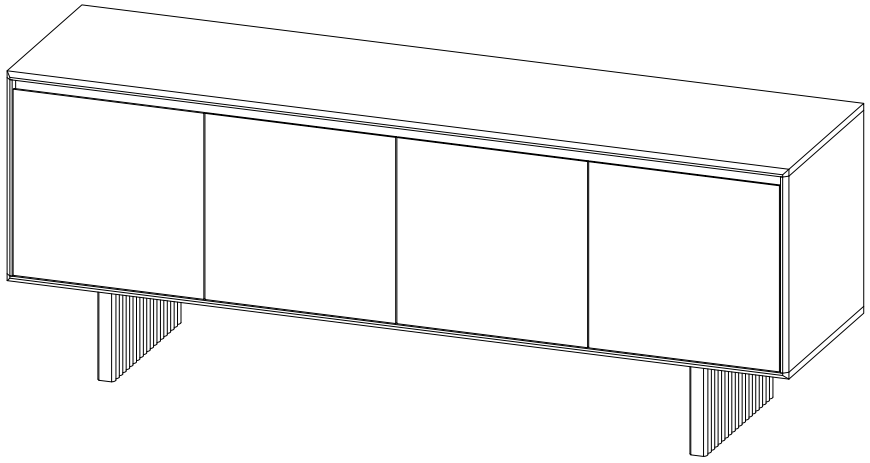


⚠ WARNING ⚠


Weight Capacity - 175 LBS
Warning : Do not stand on Sideboard
Warning : Do not over torque bolts.

PREPARATION


* Before beginning assembly of product , make sure all parts are present . Compare parts with parts contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly time : 10 minutes
* Tools Required for Assembly (included): Allen key
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

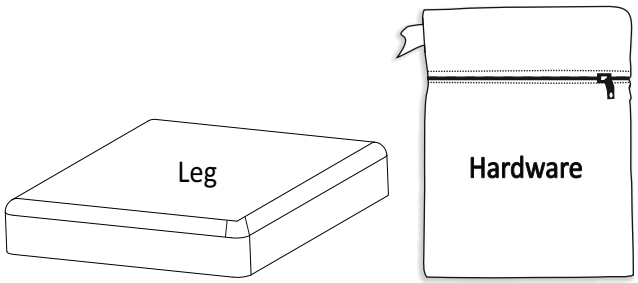


STEP1 Unwrap the legs & take out legs.
Open the hardware pouch & take out hardware.

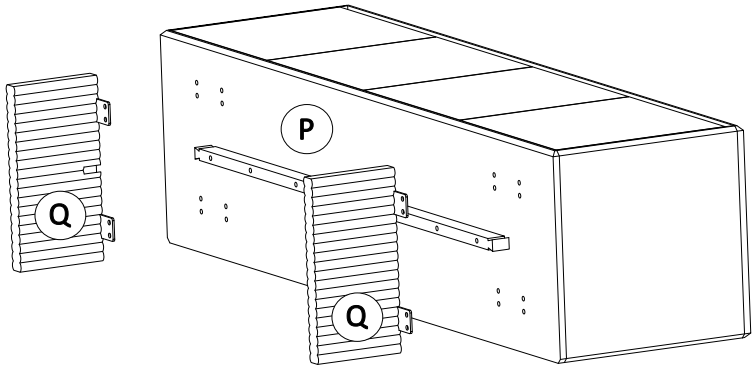

STEP2 Place the Sideboard upside down on a clean surface.
Align legs on both sides of Sideboard as per side holes present on either side of Sideboard.

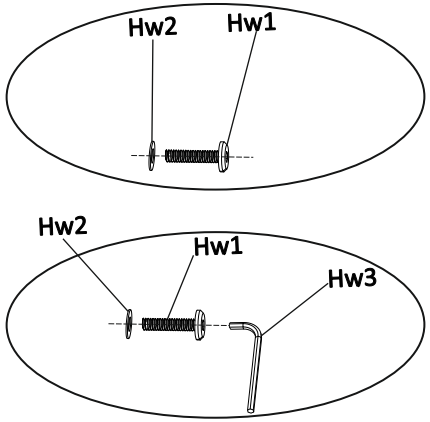


STEP3 Put the washer on the Bolt in the order shown in picture.

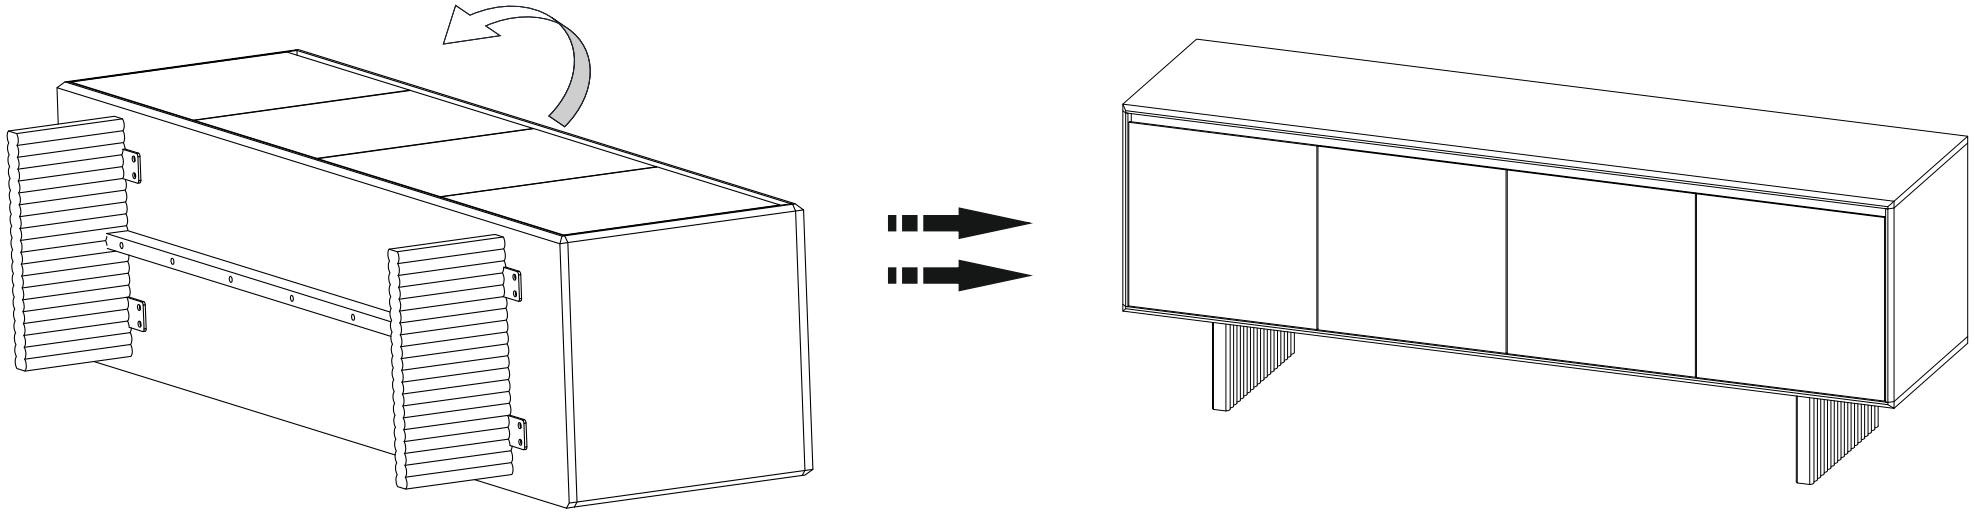

STEP4 Insert Allen Bolt (Hw1) with Washer (Hw2) tighten with Allen Key (Hw3).
Don't over tighten. In the order shown in picture (STEP 3).

Repeat step 4 for, other side leg, flip the Sideboard upright with help.
Now product is ready for use.

SFV5746A
Dimension- 68.00"W* 18.00"D*26.00"H
Weight Capacity: 55 lbs
WARNING : DO NOT STAND ON SIDEBOARD
WARNING : DO NOT OVER TORQUE BOLTS/SCREWS

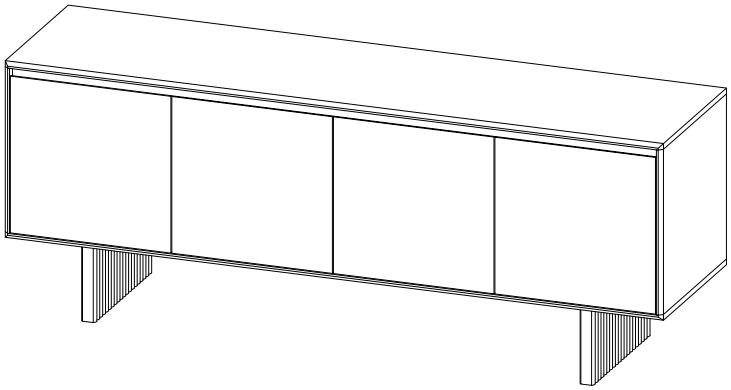

Safety Strap Attachment


1. Mark the location of the hole on the wall using bracket (A) approx 1" below the top of furniture. Predrill the holes at marked location & insert wall **plug** (E). Align bracket (A) onto wall **plug** (E) & secure using long screws (C).

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket (A) on the mark. Mark and drill holes for the screws using a 3/32" drill bit. Attach the bracket to the furniture using the short screws (C).

3. Move the furniture to its final position, and align the bracket on the furniture with the bracket on the wall. Thread the strap (D) through the bracket as shown, and tighten until snug. Do not overtighten.

Important: Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

A 2 x Bracket

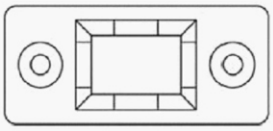


B 2 x Long Screw



C 2 x Short Screw



D Strap

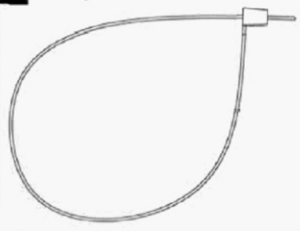

E 2 x **Wall plug**



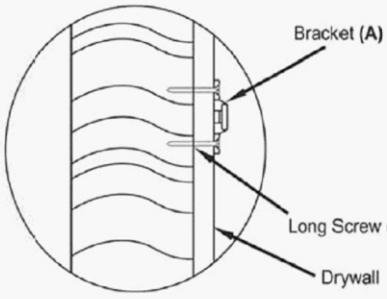


Figure A

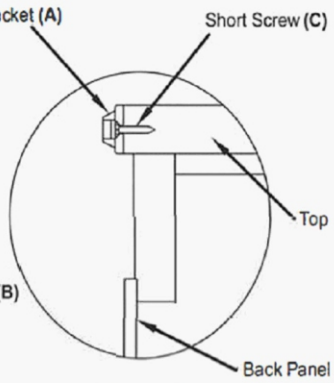


Figure B

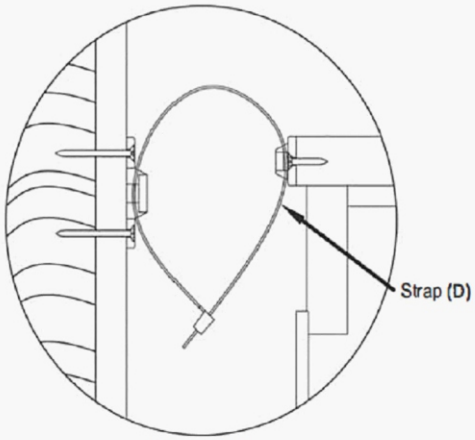


Figure C