NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

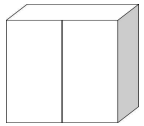

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 15 minutes.
* Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

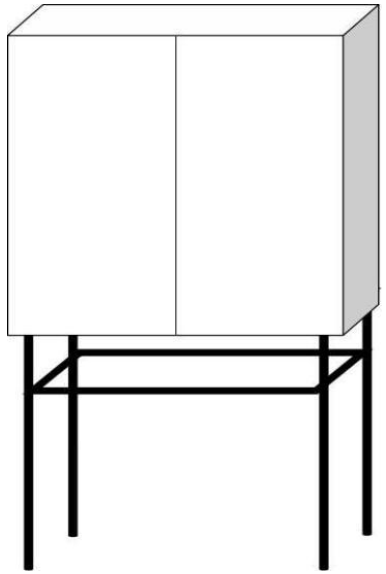
* Clean with soft and dry cloth


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	CARTON CALL
A	CABINET		1X	1 OF 2
B	STAND		1X	2 OF 2
HW1	ALLEN BOLT 5 X 1 X 15 MM		8X	2 OF 2
HW2	ALLEN KEY 4 MM		1X	2 OF 2

SAFAVIEH COUTURE

Item ID # SFV6611A
Product Dimensions - 39.3” W X17.75”D X55.10”H

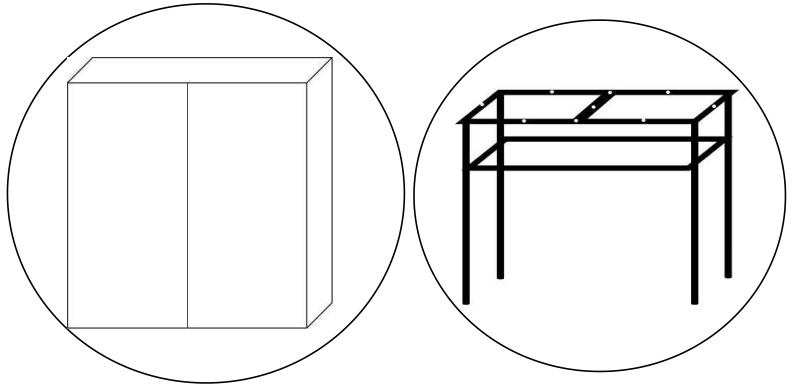
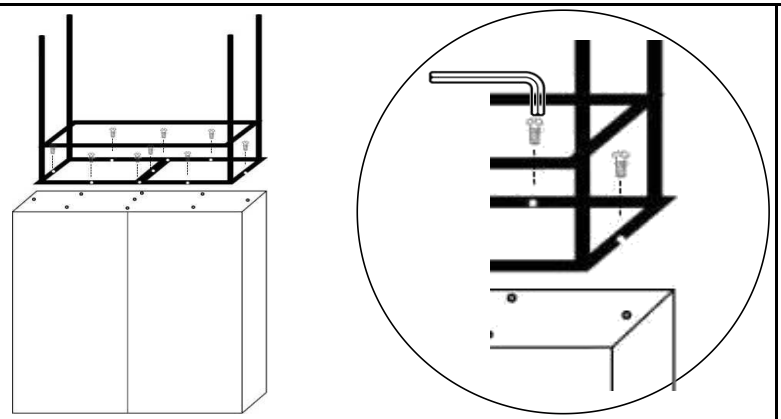
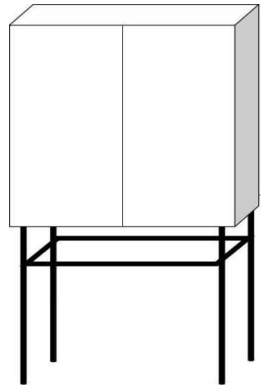




Weight Capacity: 40 LBS on top of the product
20 LBS on shelves
Warning : Do not stand on Cabinet
Warning : Do not over torque bolts

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 15 minutes.
* Tools Required for Assembly (included): Allen Key
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
STEP 1: OPEN BOTH BOXES AND TAKE OUT THE CABINET (A) AND STAND (B).	STEP2: PLACE THE CABINET (A) UPSIDE DOWN ON A SOFT SURFACE. PLACE THE STAND (B) UPSIDE DOWN ON TOP OF THE CABINET. ALIGN THE ALLEN BOLT (HW1) WITH THE HOLES. USE THE ALLEN KEY (HW2) TO SCREW IN THE BOLTS, BUT DON'T TIGHTEN THEM COMPLETELY."	STEP3: PLACE THE CABINET UPRIGHT AND MAKE SURE THE STAND IS LEVEL. FIRMLY TIGHTEN THE BOLTS (HW1) WITH THE ALLEN KEY (HW2).