NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**


PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 60 minutes.
* Tools Required for Assembly (included): Open Wrench & Allen key

CARE AND MAINTENANCE


* For daily maintenance, clean dust with soft dry cloth. Do not use abrasive cleaners.
* Spills should be removed immediately with damp and clean white cloth
* Avoid placing your furniture in direct sunlight. Fabric and finishing will fade over time
* Clean periodically with a dry cloth to remove residual dust and prevent dirt build up

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	CARTON CALL
A	Headboard		1 X	1 of 3
B	Headboard Bottom Rail		1 X	1 of 3
C	Footboard		1 X	1 of 3
D	Side Rail		2 X	2 of 3
E	Center Supports Rail		1 X	2 of 3






SAFAVIEH COUTURE



Item: SFV7709A-K
Product Dimensions: 82.3''W x 84.7''D x 84''H

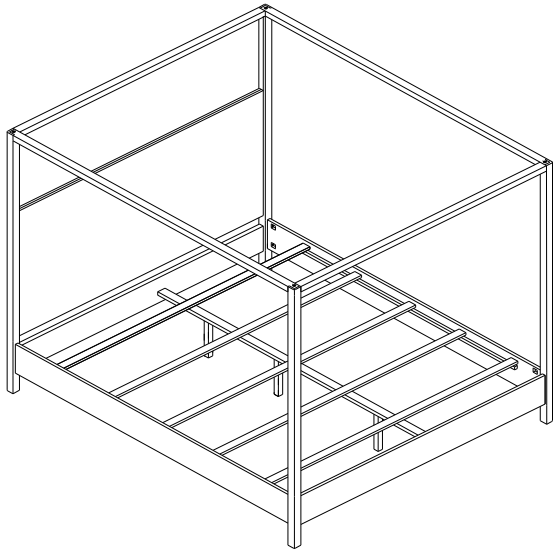

⚠ WARNING ⚠


Weight Capacity - 800 Lbs
Warning : Do not stand on Bed
Warning : Do not over torque bolts.


PIECE	DESCRIPTION	PICTURE	QUANTITY	CARTON CALL
F	Center Supports leg		3 X	2 of 3
G	Slat		5 X	2 of 3
H	Posts Headboard		2 X	3 of 3
I	Posts Foot board		2X	3 of 3
J	Side Top Rail		2 X	3 of 3
K	HB & FB Top Rail		2 X	3 of 3
HW1	Socket Screws 8 x 0.5 x 50mm		6 X	2 of 3
HW2	Socket Screws 6 x 0.5 x 80mm		4 X	2 of 3
HW3	Lock Washer 8 x 14 x 2mm		6 X	2 of 3

PIECE	DESCRIPTION	PICTURE	QUANTITY	CARTON CALL
HW4	Flat Washer 8 x 19 x 2mm		6 X	2 of 3
HW5	Lock Washer 6 x 12 x 1.6mm		4 X	2 of 3
HW6	Flat Washer 6 x 12 x 1mm		4 X	2 of 3
HW7	Curved Washer 5/16’’x22x15x1.5mm		16 X	2 of 3
HW8	Stud Bolt 5/16’’ x 0.8 x 80mm		16 X	2 of 3
HW9	Hexagonal Nut 5/16’’ x 13 x 13mm		16 X	2 of 3
HW10	Open Wrench 13mm		1 X	2 of 3
HW11	Allen key 4mm		1 X	2 of 3
HW12	Screw JF 8 x 32mm		10 X	2 of 3

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 60 minutes.
* Tools Required for Assembly (included): Open Wrench & Allen key
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

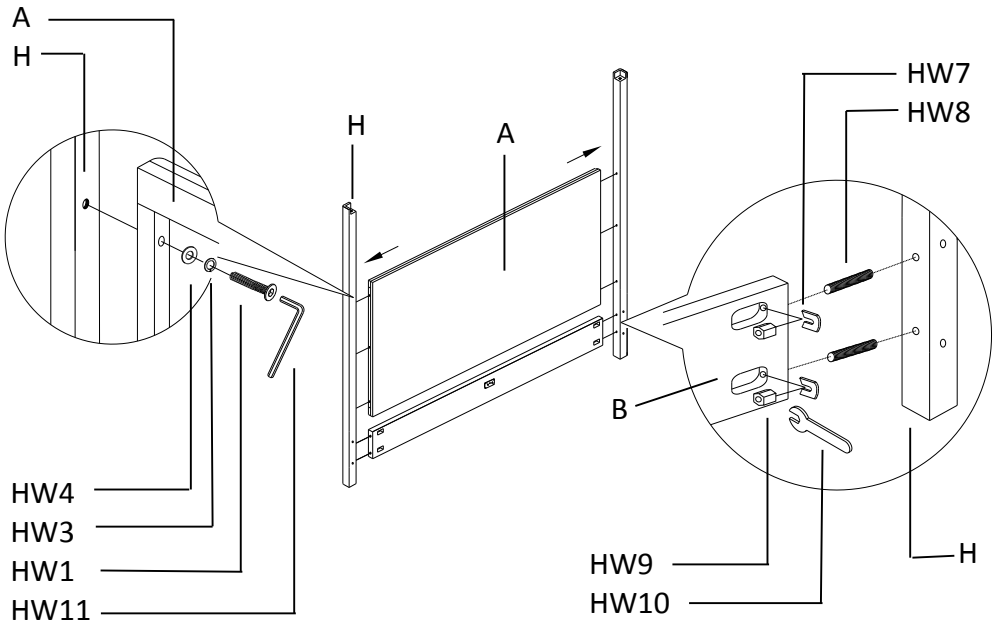

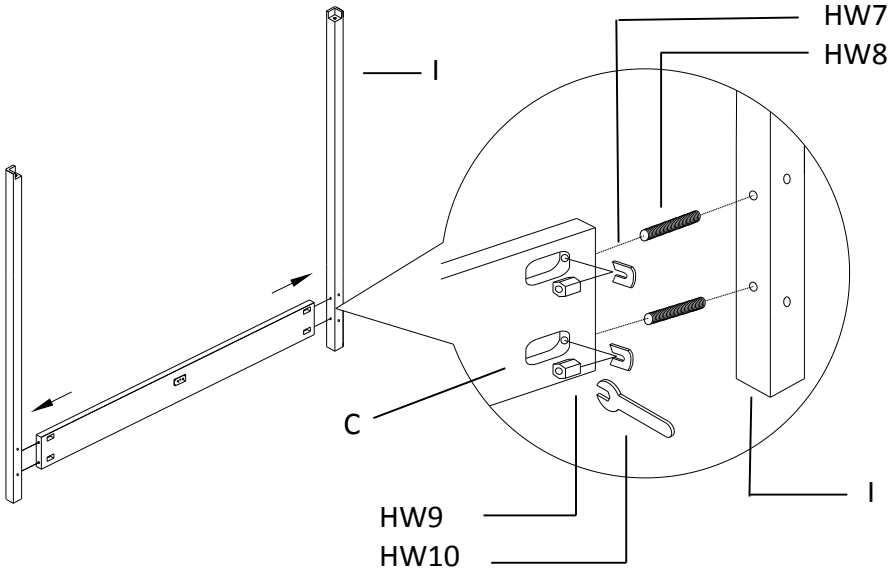


STEP 1: With your hand, screw the Stud Bolt (HW8) into the center slot on the Headboard post (H) by rotating the bolt in clockwise rotation until tight. Slide the bottom rail (B) toward the post (H) place the nut (HW9) with curve washer (HW7) then tighten with the open wrench (HW10), with a little bit loose tight until the Headboard panel aligned with the insert nut of the post. Insert the Allen bolt (HW1) with complete flat washer (HW4) and lock washer (HW3) into the Female insert nut of the post (H) and tighten with the Allen key (HW11)


STEP 2: With your hand, screw the Stud Bolt (HW8) into the center slot on the Foot board post (I) by rotating the bolt in clockwise rotation until tight. Slide Foot board rail (C) toward the post (I) place the nut (HW9) with curve washer (HW7) then tighten with the open wrench (HW10).

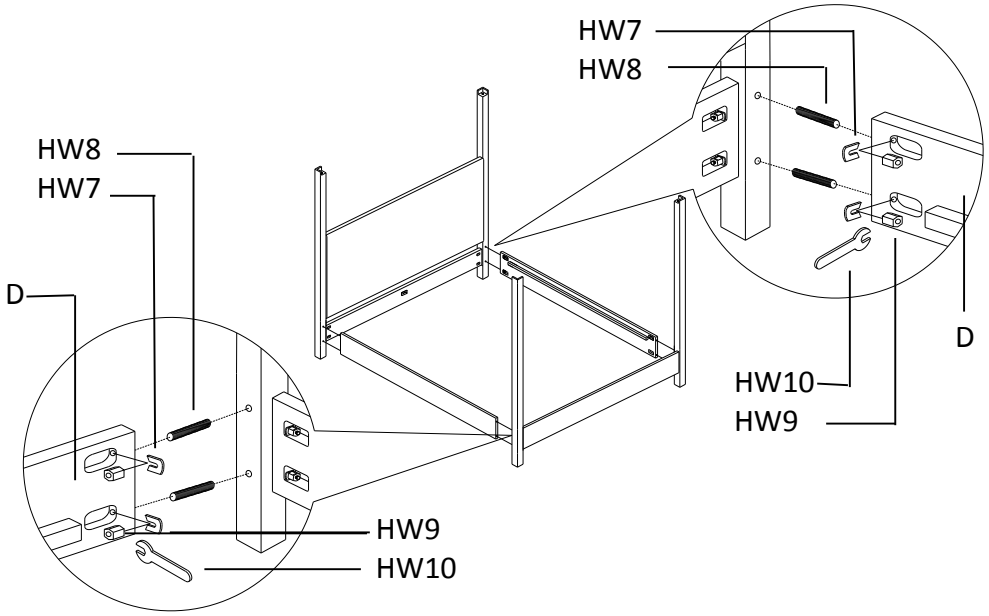


STEP 3 : With your hand, screw the Stud Bolt (HW8) into the center slot on the Headboard Post (H) and Foot board post (I) by rotating the bolt in clockwise rotation until tight. Slide the side rail (F) toward the Headboard and Foot board Post (I) place the Nut (HW9) with the curve washer (HW7) then tight with the open wrench (HW10).

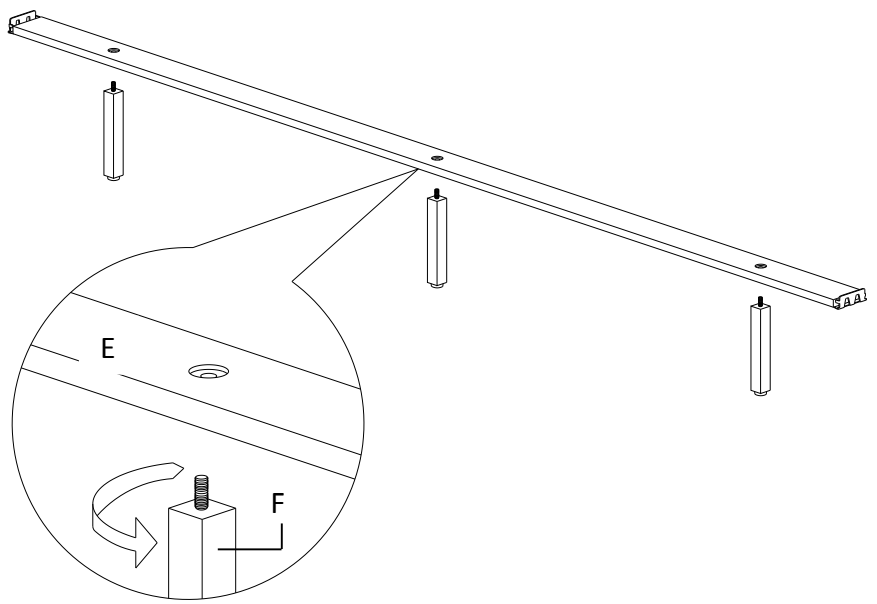


STEP 4 : Assemble Center Support Legs (F) to the Center Support Rail (E) by turning clockwise the exposed threads on top of the legs to the insert nut on the Center Support Rail.

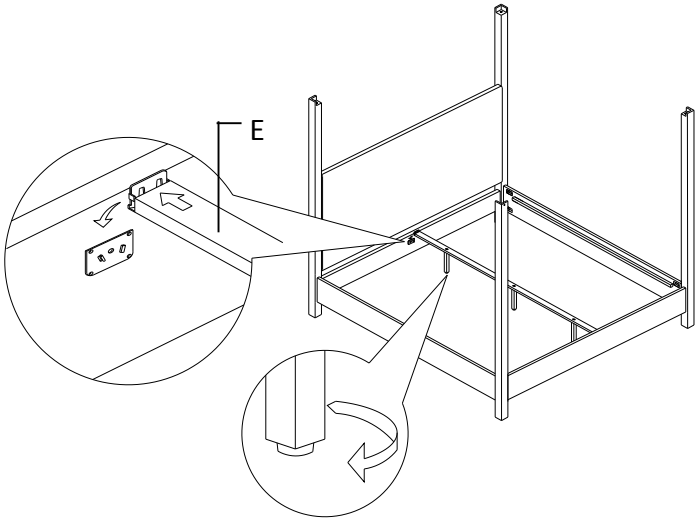

STEP 5: Attach the Center Support Rail (E) to the Headboard & Foot board by locking in the hooks. Push down firmly. Adjust the levelers on the bottom of the support legs to ensure the Center Support Rail is leveled (straight).

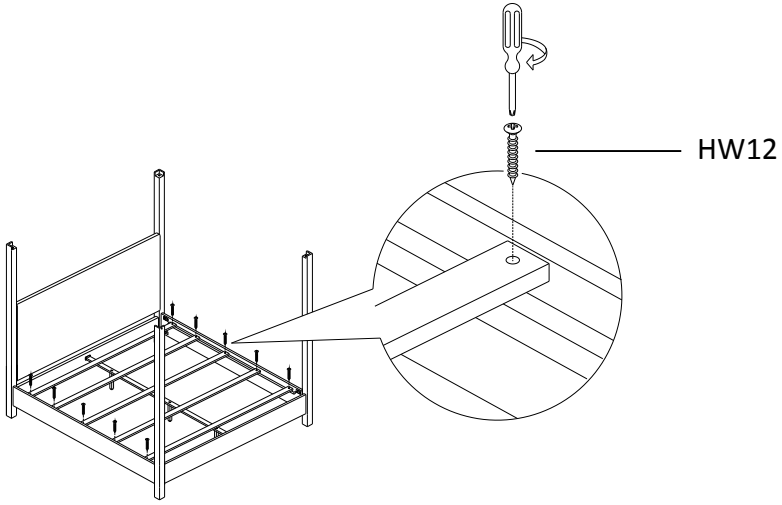

STEP 6: Lay the Slats on the Side rail and center Support Rail and Screw (HW12) all the slots.

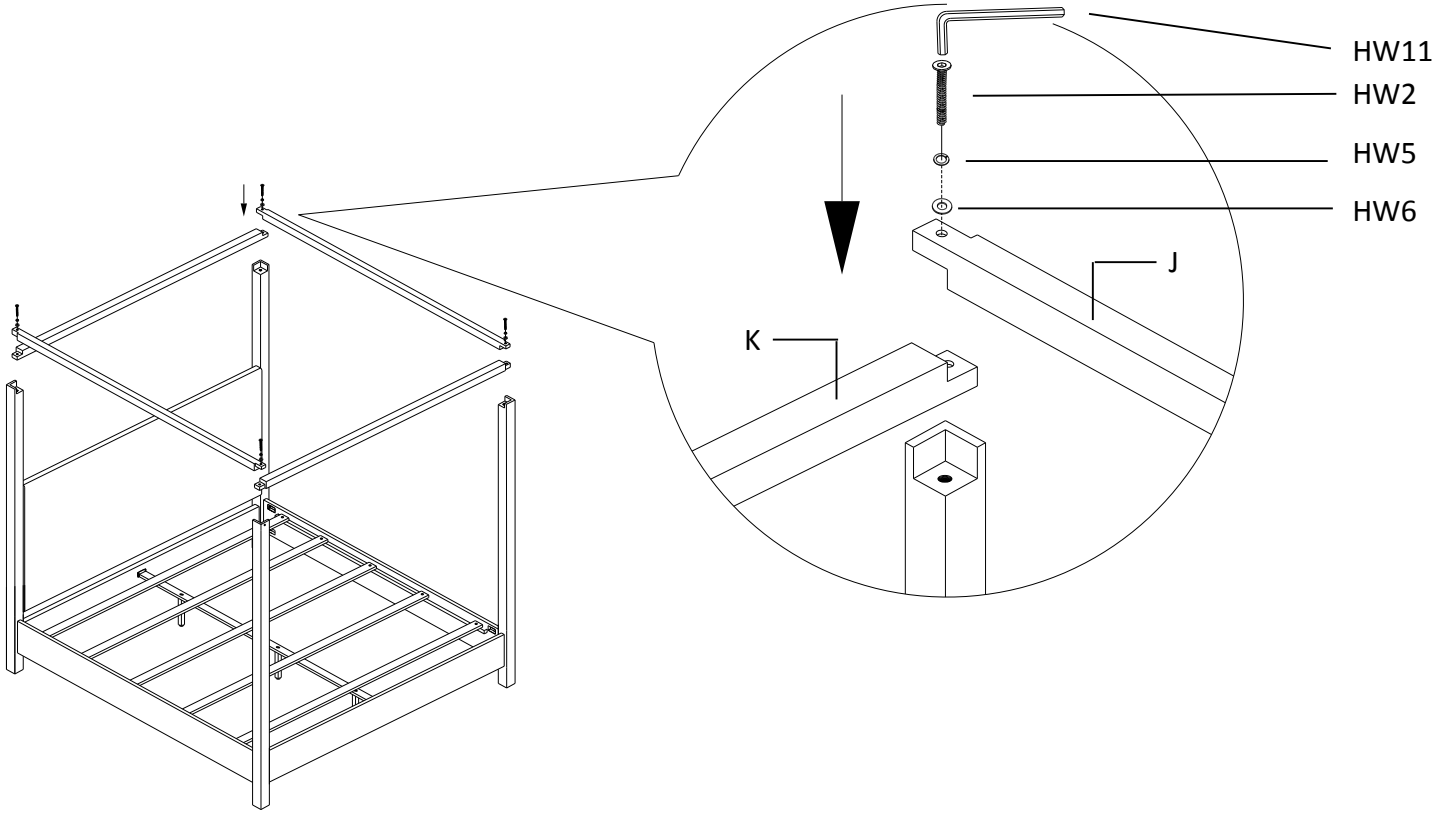

STEP 7: Place the Headboard and Foot board Top Rail then the Side Top Rail on top of the Post. Insert the Bolt (HW2) with Lock Washer (HW5) and Flat Washer (HW6) into the female insert nut of the Post through the hole of Top Rail .Tighten the Bolt with the Allen Key (HW11)