
SHEERAN KING METAL SPINDLE BED

DESIGN # SFV9561A-K

Assembly Instructions

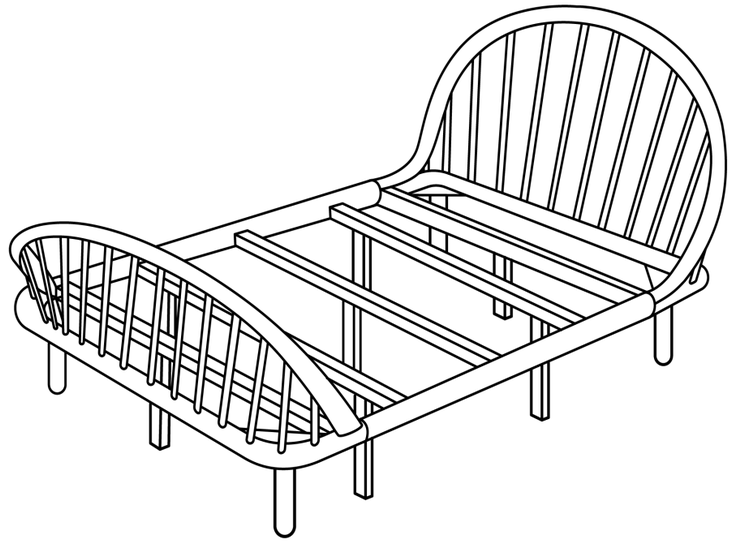

SAFAVIEH
COUTURE

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070


Thanks for bringing

Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new sheeran king metal spindle bed . You won't need any additional tools

Parts & hardware


1 x Headboard (A)

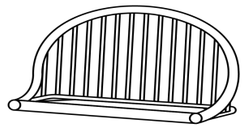


1 x Footboard (B)




2 x Support Legs (C)




4 x Legs (D)



2 x Side Rail (E)



1 x Middle Slat (F)




2 x Side Slat (G)



14 x Allen Bolt (HW1) (M8x1x20mm)



1 x Allen Key M 6 (HW2)



30 x FALT Washer (HW3)



30 x Split Lock Washer(HW4)



12 x Jam (HW5)




1 x Wrench (HW6)



4 x Allen Bolt (HW7) (M6x1x20mm)




1 x Allen Key M 4 (HW8)




1

Place Headboard on ground, Tighten the Leg(D) by Wrench (HW6), Tighten the Support Leg (C) by Allen Key (HW8)

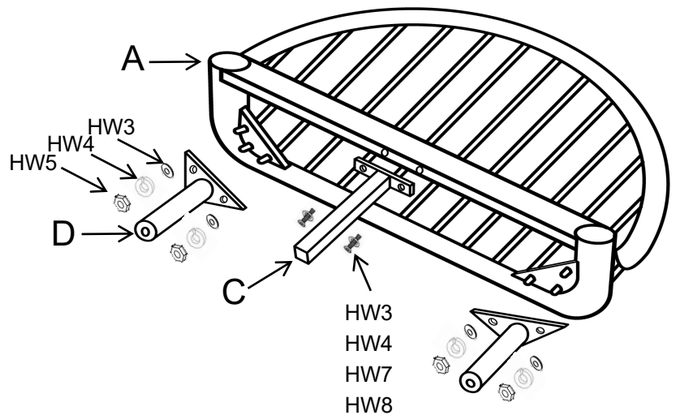


2


Repeat Step 1 for the Footboard

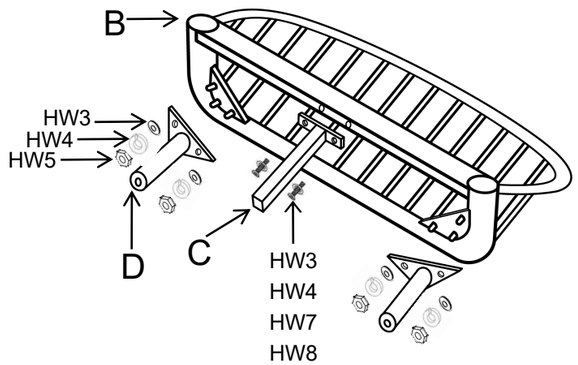

3

Attach Side Rail (E) to Headboard and Footboard together, tighten them from bottom.Then put the Slats(F,G) onto the Rails and tighten them

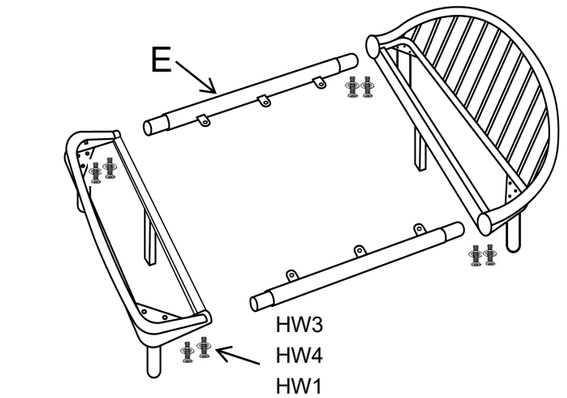


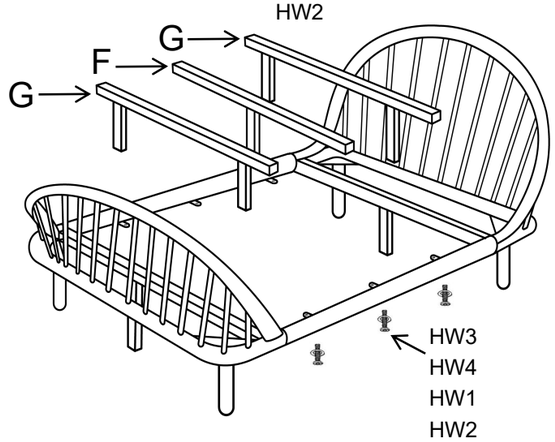

4

We'd love to see it — just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!


@safavieh

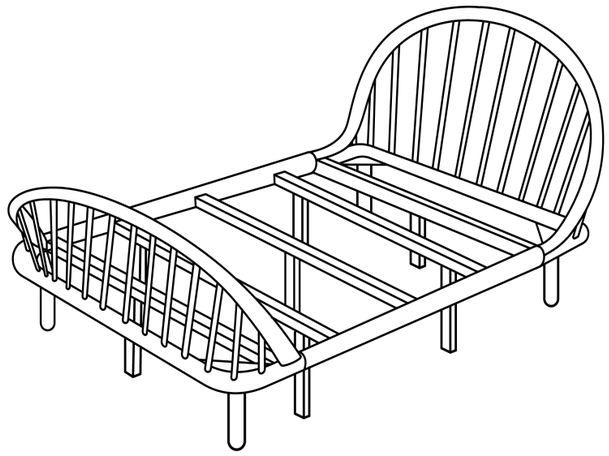

SHEERAN QUEEN METAL SPINDLE BED

DESIGN # SFV9561A-Q

Assembly Instructions

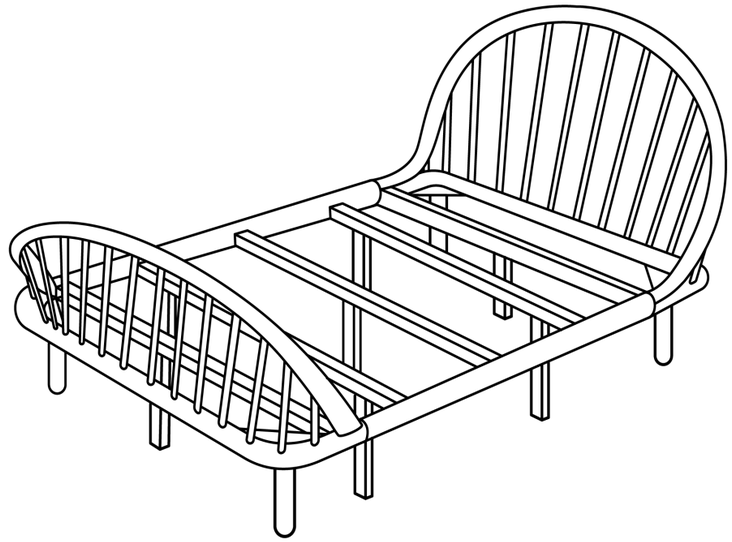

SAFAVIEH
COUTURE

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070


Thanks for bringing

Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new sheeran queen metal spindle bed . You won’t need any additional tools

Parts & hardware


1 x Headboard (A)

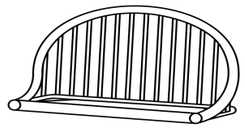


1 x Footboard (B)




2 x Support Legs (C)




4 x Legs (D)



2 x Side Rail (E)



1 x Middle Slat (F)




2 x Side Slat (G)



14 x Allen Bolt (HW1) (M8x1x20mm)



1 x Allen Key M 6 (HW2)



30 x FALT Washer (HW3)



30 x Split Lock Washer(HW4)



12 x Jam (HW5)



1 x Wrench (HW6)



4 x Allen Bolt (HW7) (M6x1x20mm)




1 x Allen Key M 4 (HW8)




1

Place Headboard on ground, Tighten the Leg(D) by Wrench (HW6), Tighten the Support Leg (C) by Allen Key (HW8)

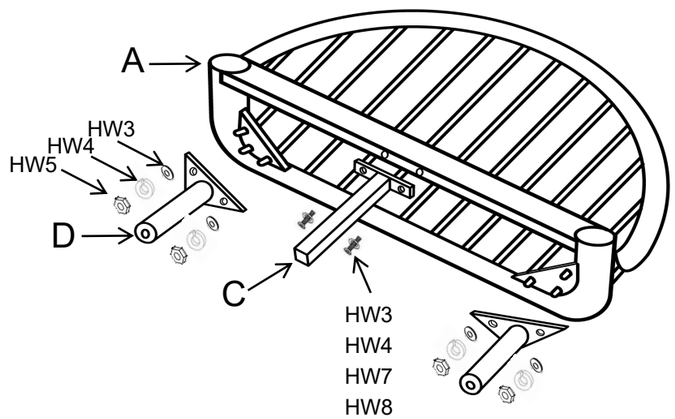


2


Repeat Step 1 for the Footboard

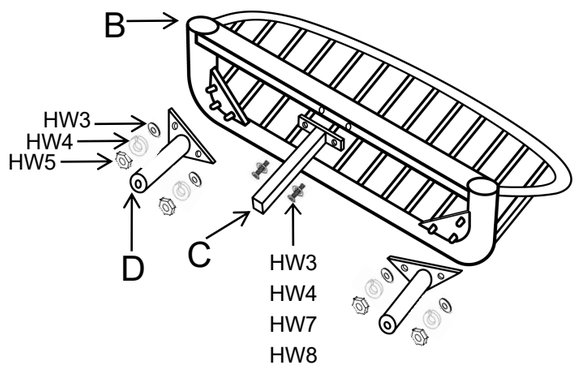

3

Attach Side Rail (E) to Headboard and Footboard together, tighten them from bottom.Then put the Slats(F,G) onto the Rails and tighten them

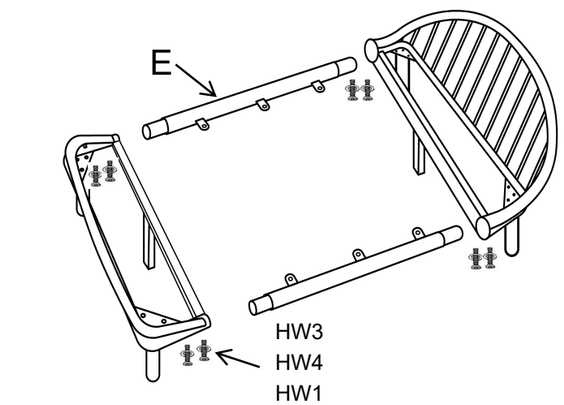

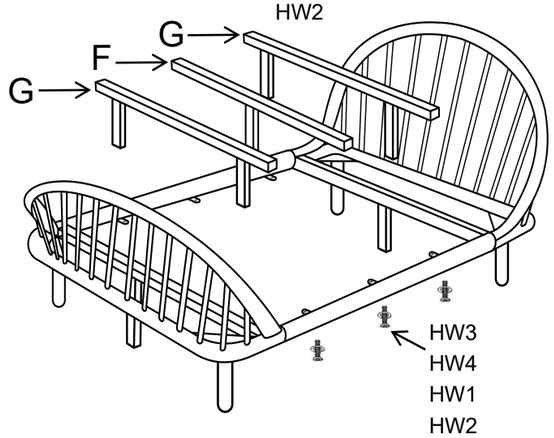

4

We’d love to see it — just tag us (we’re @safavieh) and use the hashtag #safavieh on Instagram!

@safavieh

